

INSTRUCTION MANUAL

20X 2MP HD ANALOG SPEED DOME CAMERA




Please read this manual thoroughly before use and keep it handy for future reference.


WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

CAUTION

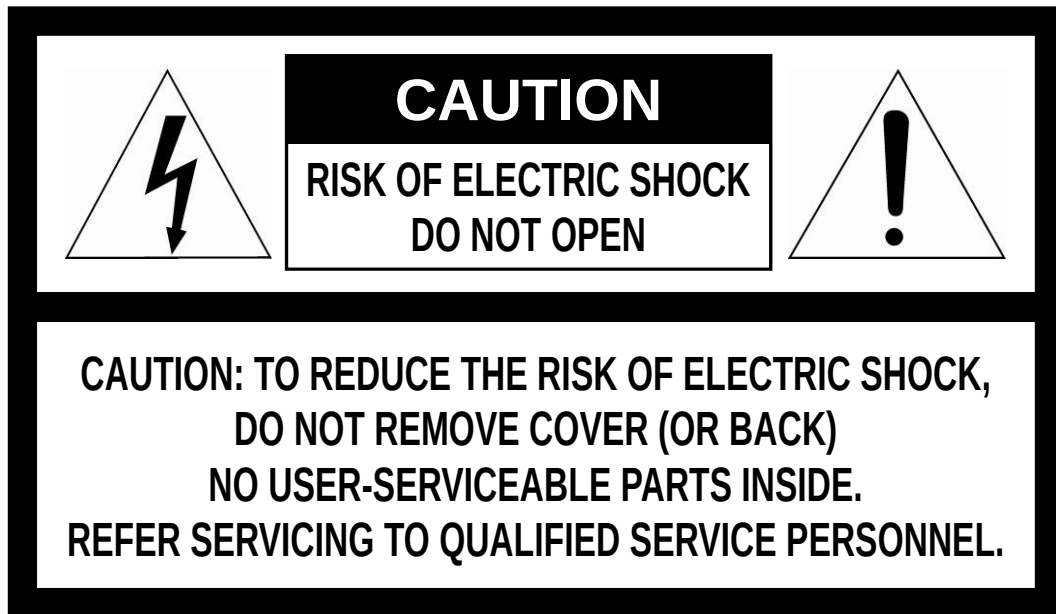

EXPLANATION OF GRAPHICAL SYMBOLS

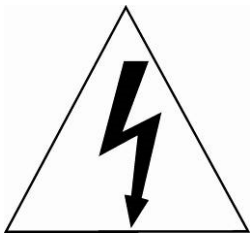

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC INFORMATION: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE COMPLIANCE STATEMENT

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **CAUTION – THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.**
16. **Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.**



Table of Contents

Chapter 1 — Introduction.....	6
1.1 Features.....	6
Chapter 2 — Installation and Configuration	7
2.1 Package Contents	7
2.2 Mounting the Camera.....	8
2.2.1 Locking the Camera.....	8
2.2.2 Heater Kit Installation (Optional)	10
2.3 Basic Configuration of Dome Camera System	11
2.4 Setting Dome Camera (DIP Switch)	12
2.5 Setting Dome Camera Address (ID)	13
2.6 Connections.....	13
2.7 Getting Started.....	14
Chapter 3 — Program and Operation.....	15
3.1 Dome Camera Selection	15
3.2 Accessing the On-Screen Menu Utility.....	15
3.3 How to control the On-Screen Menu Utility	15
3.4 Auto Scan.....	16
3.5 Preset.....	18
3.6 Tour	20
3.7 Pattern	22
3.8 Privacy Zone	23
3.9 Camera Menu	24
3.10 Dome Communication	27
3.11 Alarm.....	28
3.12 Dome Setup.....	29
Appendix A — Specifications	36
Appendix B — Troubleshooting	38

Chapter 1 — Introduction

1.1 Features

- Built-in optical power zoom camera with True Night Shot function
- 240 Preset positions with the individual camera AE setup
- 8 Tours consist of Presets, Patterns, Auto Scans and other Tours can be programmed with over 300 functions and preset locations. While moving, each Preset scan can be watched in smooth **Vector Scan** mode.
- 16 Auto Scans with the normal, the vector, and the **random** mode and the endless Auto-Pan with 13 speed steps
- 8 Patterns (up to 500 seconds) and 16 Privacy Zones
- 4 Alarm inputs, 2 Alarm outputs (5VTTL)
- Variable speed from 0.1°/sec. to 380°/sec.
Three Variable speed (SLOW, NORMAL, TURBO)
- Pan/Tilt speed is inversely proportional to the zoom ratio with the option.
- Maximum speed is 380°/sec. when Preset command.
- Auto Calibration from 0.1° to 6° (Tilt range is -10° to 190°)
- Programmable user preferences (alarm, preset, title, etc.)
- 180° Digital Flip
- Function Run menu using DVR without function key (Pattern, Scan ...)
- Built-in RS-485 receiver driver (Up to 3999 selectable camera addresses)
- 12VDC or 24VAC for Camera
- Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

Chapter 2 — Installation and Configuration

2.1 Package Contents

The dome camera is designed with compact, small size, hard dome camera housing.


The housing is constructed of aluminum, steel and plastic. The housing is designed to be mounted on a wall or a ceiling. The housing meets the Protection Classification IP66 standards for dust and moisture resistance.

* Dome Camera	1
* Instruction Manual (This Document)	1
* Template Sheet	1
* Mounting Bracket	1
* Safety Lanyard	1
* Accessory Kit	1
1) Mounting screws (PH6 x 35.0)	(4)
2) Plastic anchors	(4)
3) O-Rings	(4)
4) Torx wrench	(1)
* Accessory Connector	1
1) 2-Pin Terminal Block	(1)
2) 3-Pin Terminal Block	(1)
3) 4-Pin Terminal Block	(1)
4) 5-Pin Terminal Block	(1)

2.2 Mounting the Camera

The dome camera is for use in surface or pendent mounting applications, and the mounting member must be capable of supporting loads of up to 10 lb (4.5 kg). (Pendent mounting must use pendent mount accessory.)

The dome camera's mounting bracket should be attached to a structural object, such as hard wood, wall stud or ceiling rafter that supports the weight of the dome camera.

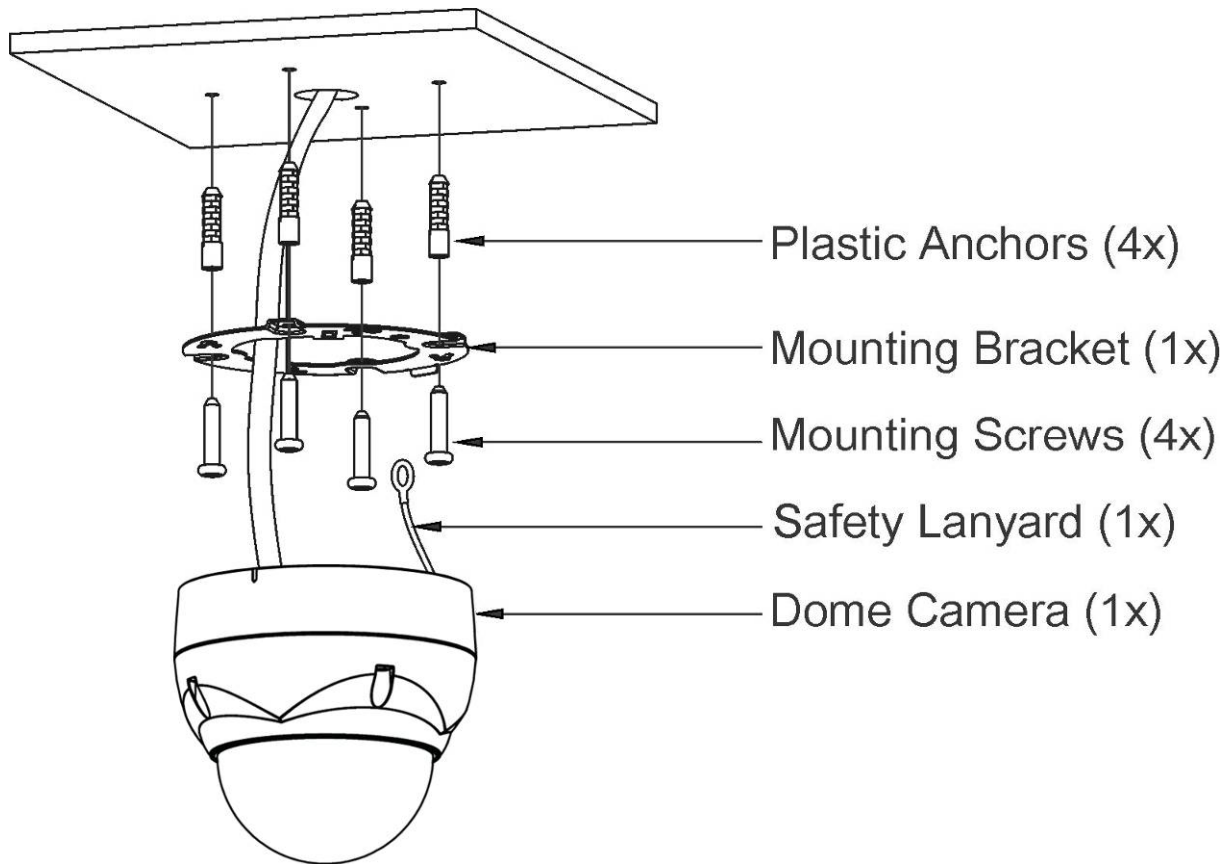

CAUTION: A silicone rubber sealant must be applied to seal the housing to secure waterproofing.

2.2.1 Locking the Camera

1. Make screw holes on the ceiling using the supplied mounting Template Sheet (Figure A).
2. Fix the Mounting Bracket to the ceiling using supplied Anchors (4x) and Mounting Screws (4x) (Figure B).
3. Hook up the Safety Lanyard to the Safety Lanyard Hook of the Mounting Bracket (Figure C).
4. Align the locking tab on the bracket and the locking slot on the base of the dome (Figure D).
5. Turn the dome to the counterclockwise about 10 degree to the locked position (Figure E).

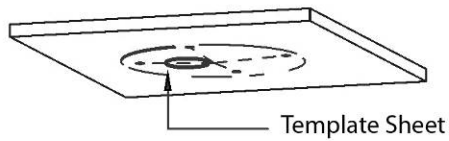


Figure A

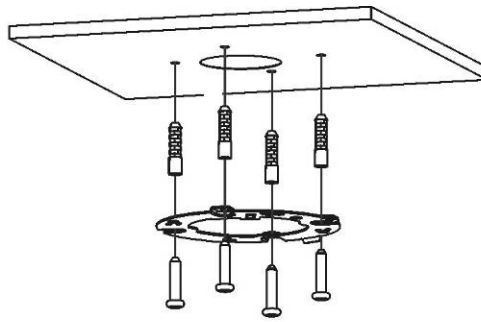


Figure B

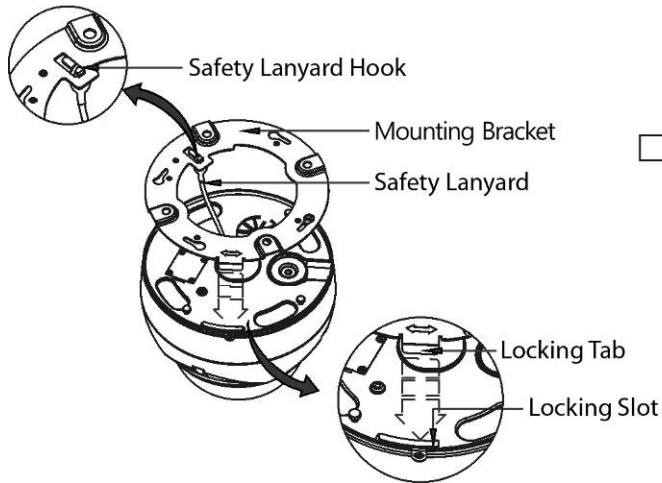


Figure C

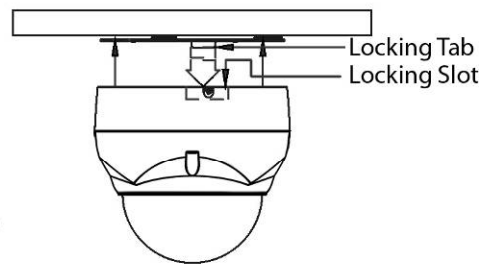


Figure D

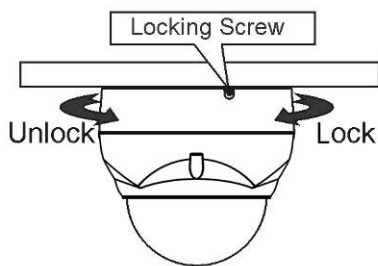


Figure E

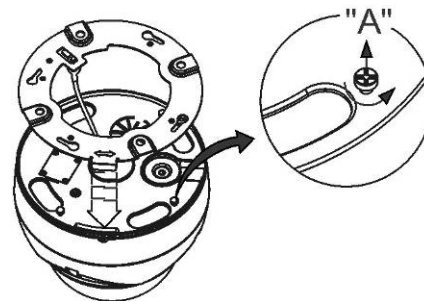


Figure F

CAUTION: Before installing mounting bracket to surface pre-adjust the four mounting screws "A" on the base of the dome camera to best match the mounting bracket locked position. Unscrew the locking screw on the side of the dome's base and fit the tab of the mounting bracket into the locking slot. Screws "A" should not be too tight or too loose when the dome is in the locked position. After setting the proper positions of screws "A" remove the mounting bracket and install it to the proper surface. If it is too difficult to lock the dome in position after the mounting bracket has been installed readjust the screws "A" by unscrewing them a small amount and try to install dome camera again.

2.2.2 Heater Kit Installation (Optional)

1. Assemble the Heater board to two bosses with screws.


Take it to a reference "B" in the bottom case as below.

2. Place the Heater in the slot "A".

Heater cable should be placed away from the Main Board.

3. Plug the power connector to the socket "C" (J1) of the Heater Board.

4. 24VAC is recommended to use for the camera power for stable operation with heater kit.

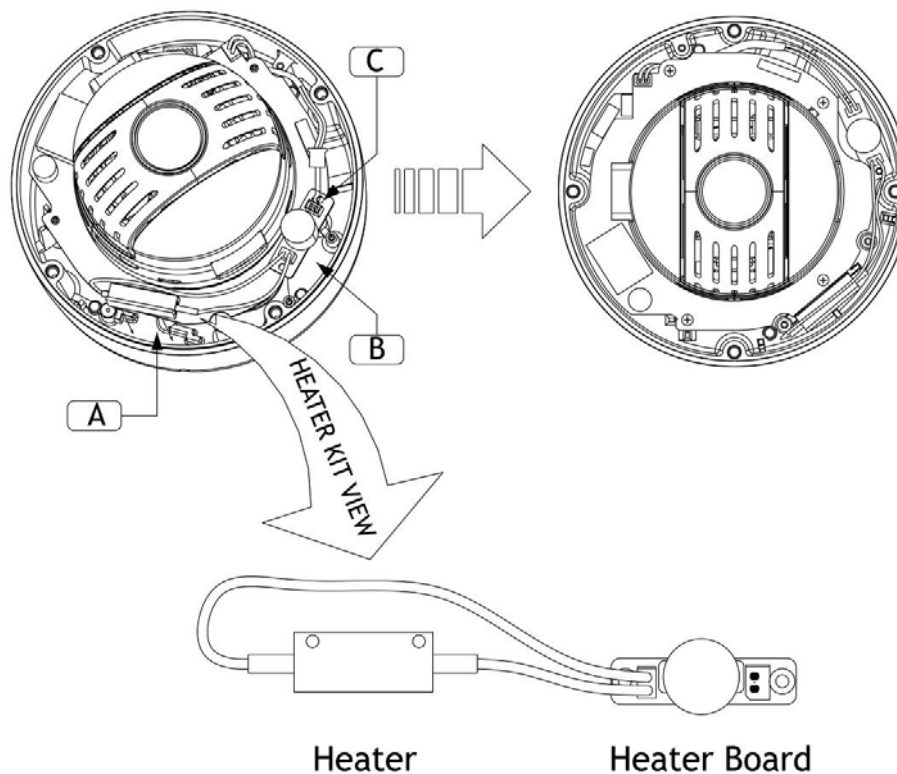

• HEATER (IF APPLICABLE)

Power Supply	24VAC
Power Consumption	10W
Heater ON	at 59°F (15°C)
Heater OFF	at 77°F (25°C)


• POWER

Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

CAUTION 1: Dehumidify after installing the heater kit. Otherwise, moisture may be generated at certain temperatures. Then close the cover tightly to ensure waterproofing.

CAUTION 2: Please reset the camera after 30 minutes when installing it in situations colder than -10°C.


2.3 Basic Configuration of Dome Camera System

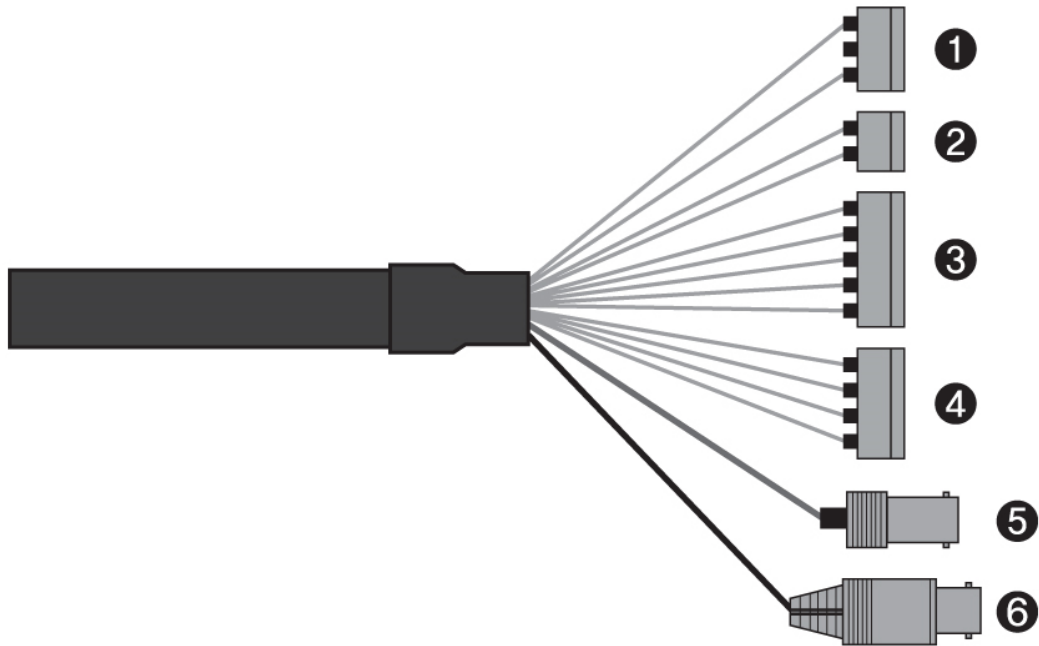


No.	Type	Description
1	3P TERMINAL BLOCK	CAMERA POWER
2	2P TERMINAL BLOCK	TX+: RS485+ (A)
		TX-: RS485- (B)
3	5P TERMINAL BLOCK	ALARM INPUT 1
		ALARM INPUT 2
		ALARM INPUT 3
		ALARM INPUT 4
		GND
4	4P TERMINAL BLOCK	ALARM OUTPUT 1
		GND
		ALARM OUTPUT 2
		GND
5	BNC BLUE	HD OUTPUT
6	BNC BLACK	CVBS OUTPUT

The dome camera must be installed by qualified service personnel in accordance with all local and federal electrical and building codes.

2.4 Setting Dome Camera (DIP Switch)

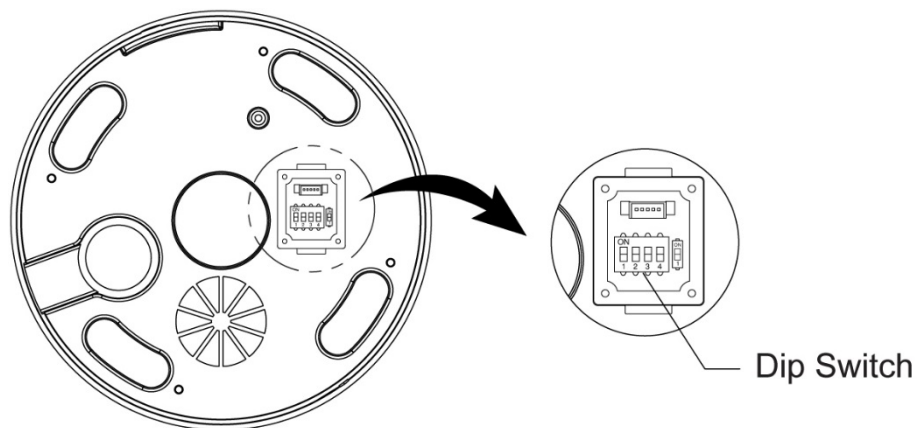

NOTE: Open the DIP switch cover and change the setting of DIP switch.
After changing the setting, close the cover tightly to ensure waterproofing.

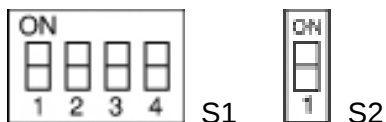

You can set video signal with D1 and video type with D2 in S1.

S1-D1	Video Signal
OFF	HD-TVI OUTPUT
ON	AHD OUTPUT

S1-D2	Video Type
OFF	NTSC
ON	PAL

You can set coaxitron protocol with D3 and D4 in S1.

S1-D3	S1-D4	HD-TVI OUTPUT	AHD OUTPUT
OFF	OFF	Hikvision-C	ACP-PTZ
ON	OFF	Pelco-C	Reserved
OFF	ON	Reserved	Reserved
ON	ON	Reserved	Reserved

You can set CVBS output with D1 in S2.

S2-D1	CVBS OUTPUT
OFF	When WDR is on, CVBS output will be disabled.
ON	CVBS output will be displayed always. (DWDR)

2.5 Setting Dome Camera Address (ID)

To prevent damage, each dome camera must have a unique address (ID).
The factory default setting is 1.

Refer to '3.10 Dome Communication' section for detailed information.

2.6 Connections

- **Connecting to the RS-485**

The dome camera can be controlled remotely by an external device or control system, such as a control keyboard, using RS-485 half-duplex serial communications signals.

- **Connecting HD Output connector**

Connect the HD output (BNC) connector to the video input.

- **Connecting CVBS Output connector**

Connect the CVBS output (BNC) connector to the video input.

- **Connecting Alarms**

- **A1,A2,A3,A4 (Alarm Input 1,2,3,4)**

You can use external devices to signal the dome camera to react on events. Mechanical or electrical switches can be wired to the A1,A2,A3,A4 (Alarm Input 1,2,3,4) and G (Ground) connectors.

See Chapter 3 — Program and Operation for configuring alarm input.

- **G (Ground)**

NOTE: All the connectors marked G or GND are common.

Connect the ground side of the alarm input and/or alarm output to the G (Ground) connector.

- **AO1,AO2 (5VTTL Alarm Output 1,2)**

The dome camera can activate external devices such as buzzers or lights. Connect the device to the AO1,AO2 (Alarm Output 1,2) and G (Ground) connectors.

See Chapter 3 — Program and Operation for configuring alarm output.

- **Connecting the Power**

Connect power of 12VDC or 24VAC for the dome camera.


When using a 12VDC adapter, connect the positive (+) pole to the '+' position and the negative (-) pole to the '-' position.

Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

24VAC is recommended to use for the camera power for stable operation with heater kit.
If using 12VDC, the heater will not operate at all.

2.7 Getting Started

Once installed apply power to the dome camera. The dome camera will start a configuration sequence.

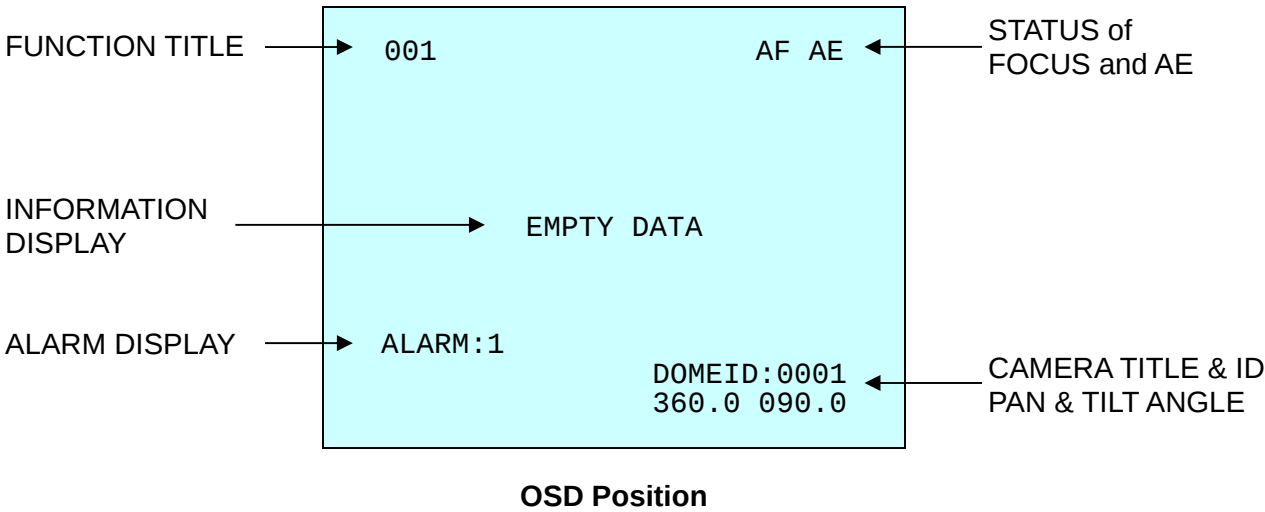

Chapter 3 — Program and Operation


3.1 Dome Camera Selection

IF you use the keyboard, before you program or operate a dome camera, you must select the dome camera by pressing **No.** + **CAM** keys.

Example: Pressing **1** , **0** + **CAM** keys sequentially will select dome camera 10. The selected dome camera ID will be displayed on the LCD monitor of the keyboard.

3.2 Accessing the On-Screen Menu Utility

You can call up the On-screen menu utility on your monitor by pressing the **MENU** key on the keyboard or DVR, the following On-screen menu utility will appear:

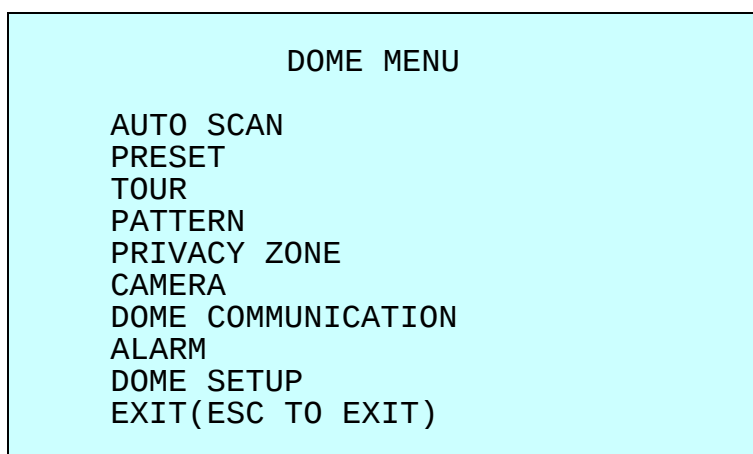

3.3 How to control the On-Screen Menu Utility

Function	Button
Call the On-screen menu utility.	MENU
Navigate through the menu items.	Up or Down
Go into the sub-menu items.	Right , Left or IRIS Open
Change value. Enter the editing title mode.	Right , Left , Tele or Wide
Enter the changing angle mode.	IRIS Open
Exit the changing angle mode.	IRIS Close

3.4 Auto Scan

The Auto Scan supports up to 17 programmed angles at user-programmable speeds.

AUTO SCAN SETUP	
NUMBER	: 01
TITLE	: A01
MODE	: NORMAL
SPEED	: 5 STEP
START ANGLE	: -----
END ANGLE	: -----
SCAN DIR	: CCW
SWAP	: OFF
DWELL	: 03 SEC
FOCUS	: AUTO
SAVE AND EXIT(ESC TO CANCEL)	

NUMBER 01 ~ 08, 10 ~ 17, **09**: AUTO-PAN mode (endless panning)
TITLE up to 6 characters
MODE NORMAL, VECTOR, RANDOM (AUTO-PAN mode: NORMAL, RANDOM only).

NORMAL Move from start point to end point in panning only
 VECTOR Move from start point to end point including tilt and zoom simultaneously and linearly.
 RANDOM Move randomly between the start point and the end point

SPEED 1 ~ 13 step, the lower number means the slower speed.
SCAN DIR Set the Scan direction, CCW (Counter Clock Wise), CW (Clock Wise).
SWAP Swaps the start point for the end point.
DWELL Set the dwell time at the both end, 01 ~ 99 seconds.
FOCUS AUTO, MANUAL

Follow these steps to program Auto Scan:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Auto Scan and press the **Right** key.
2. Select "NUMBER" and set the desired number by pressing the **Right** or **Left** key.
3. Select "TITLE" and press the **Tele** or **Wide** key to enter the title edit mode.
4. Press the **Tele** or **Wide** key to change the alphanumeric characters and move the next position by pressing the **Right** or **Left** key. Or move down to the character table and press the **IRIS Open** key at the desired character then the cursor position moves to the next position automatically. Press the **Right** or **Left** key at the "ALL DELETE" field to delete all characters. Press the **Right** or **Left** key at the "EXIT" field to finish title edit menu.

TITLE EDIT MENU (CTRL KEY)	
A01	
\$	
A B C D E F G H I J	
K L M N O P Q R S T	
U V W X Y Z 0 1 2 3	
4 5 6 7 8 9 ()	
ALL DELETE	
EXIT(ESC TO EXIT)	

5. Select **"MODE"** and **"SPEED"**.
6. Select **"START ANGLE"**. Press the **IRIS Open** key then the "CONTROL" displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the "CONTROL" disappears. To adjust at the 0.1 degree interval, press the **Tele** or **Wide** key at the pan field and the tilt field. To adjust at the one zoom interval, press the **Tele** or **Wide** key at the zoom field.
7. Select **"END ANGLE"**. Press the **IRIS Open** key then the "CONTROL" displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the "CONTROL" disappears. To adjust at the 0.1 degree interval, press the **Tele** or **Wide** key at the pan field and the tilt field. To adjust at the one zoom interval, press the **Tele** or **Wide** key at the zoom field.
8. Set **"SCAN DIR"** to CCW or CW.
9. Select **"SWAP"**, Set to ON to exchange the start angle and the end angle.
10. Set **"DWELL time"**.
11. Set **"FOCUS"**.
12. Select **"SAVE AND EXIT"** and press the **Right** or **IRIS Open** key. Press the **IRIS Close** key to exit the program without saving.

3.5 Preset

If you need to view specific places routinely, you should program Presets. A Preset is a programmed video scene with automatic pan, tilt, zoom, focus, and AE settings. In addition, Presets may be assigned the “home” position for the dome camera. As many as 240 Presets, whose positions are saved in the dome camera’s firmware, may be programmed.

There are eight pages of Preset menu. Each page has 30 Presets. Pages can be scrolled by pressing the **Right** or **Left** key on the first or last No. of Preset.

PRESET SETUP

NUMBER : 001
TITLE : -----
CAMERA SET
DWELL : -- SEC
1 2 3 4 5 6 7 8 9 0
- \$ - - - - -
- - - - -
- - - - -
NEXT PAGE
SAVE AND EXIT(ESC TO CANCEL)

- Blank Preset position
- \$ Position has the Preset
- ! Current cursor position

Follow steps below to store the Preset positions:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Preset and press the **Right** key.
2. Select the blank Preset position to be stored by pressing the **Up**, **Down**, **Right** or **Left** key.
3. After selecting a blank position, press the **IRIS Open** key. Use the **Up**, **Down**, **Right**, **Left**, **Tele** or **Wide** key to control the direction of the camera and lens.
4. After aiming the camera (view direction and lens control), press the **IRIS Close** key. The cursor will be on the “**TITLE**” after saving data then press the **Tele** or **Wide** key to edit the Preset title. Follow the procedure of the Auto Scan above to edit titles.
5. Select “**CAMERA SET**” and press the **Right** or **Left** key. Then the Preset camera setup displays.

PRESET CAMERA SETUP

FOCUS : AUTO
MOTION : OFF
MOTION SETUP
AE SETUP
SAVE AND EXIT(ESC TO CANCEL)

- | | |
|-------------------|------------------------|
| Set FOCUS | AUTO, MANUAL, ONE PUSH |
| Set MOTION | OFF, ON |

Select "**MOTION SETUP**" and press the **Right** or **Left** key. Then the MOTION setup displays.

MOTION SETUP	
SENSITIVITY	: 10
POSITION	: ALL
DELAY	: 00 SEC
OUTPUT	: OFF
HOLD TIME	: 03 SEC
EXIT(ESC TO EXIT)	

Set SENSITIVITY	00 ~ 20
Set POSITION	ALL, CENTER
Set DELAY	00 ~ 05 seconds
Set OUTPUT	OFF, OUT1, OUT2
Set HOLD TIME	03 ~ 99 seconds

Select "**AE SETUP**" and press the **Right** or **Left** key. Then the AE setup displays. Refer to the AE SETUP in the camera setup.

6. Set "**DWELL time**". (03 ~ 99 seconds)
7. To select the next page of Presets, scroll the page by pressing the **Right** or **Left** key on the first or last columns of the menu.
8. Repeat step 2 through 7 for each additional Preset position.
9. Select "**SAVE AND EXIT**" and press the **Right** or **IRIS Open** key. Press the **IRIS Close** key to exit the program without saving.

3.6 Tour

There are 8 programmable Tours. Each Tour consists of up to 40 Preset positions, Patterns, Scans or other Tours (second-level). Using second-level Tours, it can be expanded to over 300 functions in a single Tour.

TOUR SETUP	
NUMBER	: 01
TITLE	: T01
SCAN TYPE	: NORMAL
SPEED	: -- STEP
TOUR FUNCTION	
SAVE AND EXIT(ESC TO CANCEL)	

TOUR FUNCTION SETUP (CTRL KEY)	
DWELL	: -- SEC
003 A04 --- --- ---	
---	---
---	P01 --- ---
---	T02 --- ---
---	---
---	---
---	---
---	---
EXIT(ESC TO EXIT)	

---	Blank position
SCAN TYPE	NORMAL, VECTOR
DWELL	03 ~ 99 seconds
003	Preset (1 ~ 240)
A04	Auto Scan (1 ~ 8, 10 ~ 17)
P01	Pattern (1 ~ 8)
T02	Tour (1 ~ 8)

Follow the steps below to program the Tours:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Tour and press the **Right** key to enter the Tour menu.
2. Select "NUMBER" and set the desired number by pressing the **Right** or **Left** key.
3. Choose a blank position to be programmed by pressing the **Up**, **Down**, **Right** or **Left** key.
4. To add a stored Preset, press the **Tele** or **Wide** key then the stored Preset number displays.
5. To place functions other than Preset, press the **IRIS Open** key to scroll for Tour, Pattern or Auto Scan respectively.
6. You can also overwrite the programmed number and remove a stored number from the Tour, press the **IRIS Open** key until '---' is displaying in the position.
7. Repeat step 2 through 6 for each desired position. Each title will be displayed on top of the line.
8. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
9. Select "SAVE AND EXIT" and press the **Right** or **IRIS Open** key. Press the **IRIS Close** key to exit the program without saving.

You can expand the Tour sequence by calling other programmed Tours.

NOTE: The speed applies in the vector mode only.

NOTE: In the Tour mode, in conjunction with Preset and Auto Scan, you can make the camera travel from a Preset position to another Preset position at a specific speed.

Example: Preset 001>002>003>004>005>006, Auto Scan 01 starts at Preset 002, ends at Preset 003, Auto Scan 02 starts at Preset 005, ends at Preset 006;
Tour 001, 002, A01, 004, A02.

1 → 2 2~3 → 4 → 5~6, repeat
where → : Quick move, ~ : Programmed speed

To assign the functions other than Preset in the Tour when the function key is not existed:

Move the cursor to a stored Preset position.

Pressing the **IRIS Open** key will change the Preset number to other function (Auto Scan, Pattern, Tour or Preset) with the first programmed number.

To change the number, press the **Tele** or **Wide** key.

3.7 Pattern

The Pattern feature records user control of the selected dome camera. Up to 8 Patterns can be stored and played back by pressing **No.** + **PTRN** keys subsequently.

PATTERN SETUP (CTRL KEY)			
NO	TITLE	SEC	PERCENT
1 :	P01	000	00.0%
2 :	P02	000	00.0%
3 :	P03	000	00.0%
4 :	P04	000	00.0%
5 :	P05	000	00.0%
6 :	P06	000	00.0%
7 :	P07	000	00.0%
8 :	P08	000	00.0%
SAVE AND EXIT(ESC TO CANCEL)			

Follow steps below to program the Pattern:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Pattern and press the **Right** key to enter the Pattern menu.
2. Select the desired Pattern to be programmed by pressing the **Up** or **Down** key. If the Pattern is not 000, a Pattern has already been recorded. Patterns can be overwritten.
3. Press the **IRIS Open** key then the "CONTROL" displays. Move the position and the zoom position. Press the **IRIS Close** key then the "CONTROL" disappears.
4. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
5. Select "SAVE AND EXIT" and press the **Right** or **IRIS Open** key. Press the **IRIS Close** key to exit the program without saving.

NOTE: If Pattern recording time reaches 500 seconds, it will automatically stop for a moment.

3.8 Privacy Zone

Hide up to 16 unwanted scenes in a camera.

There are four pages of Privacy Zone menu. Each page has 4 Privacy Zones.

PRIVACY ZONE SETUP (CTRL KEY)			
NO		METHOD	COLOR
01	ON	BLOCK	BLACK
02	ON	BLOCK	BLACK
03	OFF	-----	BLACK
04	OFF	-----	BLACK
NEXT PAGE			
SAVE AND EXIT(ESC TO CANCEL)			

1. Place the cursor at the field.
2. Press the **IRIS Open** key then the privacy area menu displays. Move the desired position. Press the **IRIS Close** key then the "CONTROL" disappears.

To adjust the size, press the **Tele** or **Wide** key.

Returns to the previous menu.

PRIVACY AREA MENU (CTRL KEY)	
NUMBER 01	
354.8	344.8
EXIT(ESC TO EXIT)	

3. To turn the stored zone ON or OFF, press the **Tele** or **Wide** key.
4. Set the "**COLOR**": "BLACK", "WHITE", "YELLOW", "CYAN", "GREEN", "MAGENTA", "RED" or "BLUE".
5. Select "**SAVE AND EXIT**" and press the **Right** or **IRIS Open** key. Press the **IRIS Close** key to exit the program without saving.

3.9 Camera Menu

CAMERA SETUP	
FOCUS CONTROL	
WB CONTROL	
AE CONTROL	
CAMERA CONTROL	
SHARPNESS	: 01
DIGITAL ZOOM	: OFF
IMAGE FLIP	: OFF
PRESET FREEZE	: OFF
RESOLUTION	: 1080P/25
SAVE AND EXIT(ESC TO CANCEL)	

SHARPNESS	The higher the value, the more edges in the picture will be enhanced. (0 ~ 10)
DIGITAL ZOOM	OFF: Zoom range is limited to the optical. 2X: Zoom is extendable up to 2X of digital range. 4X: Zoom is extendable up to 4X of digital range. 8X: Zoom is extendable up to 8X of digital range. MAX: Zoom is extendable Max digital zoom range.
IMAGE FLIP	This function turns the video output from the camera upside down and reverses it horizontally. This option is helpful to install in the opposite side.
PRESET FREEZE	ON: the image is frozen during calling Preset.
RESOLUTION	HD-TVI Output: 1080P/30, 1080P/25, 720P/60, 720P/50, 720P/30, 720P/25 AHD Output: 1080P/30, 1080P/25

• FOCUS CONTROL

FOCUS SETUP	
MODE	: AUTO
SENSITIVITY	: HIGH
FOCUS LIMIT	: 1 M
SAVE AND EXIT(ESC TO CANCEL)	

MODE	AUTO, MANUAL, ONE PUSH, CONSTANT MANUAL Use manual mode in normal use.
SENSITIVITY	LOW, LOW.MID, MID, MID.HIGH, HIGH
FOCUS LIMIT	This distance is approximate value and the focus operates from the setting value.

CAUTION: Avoid continuous, 24-hour use of the auto focus. This will shorten the lifespan of the lens.

• WB (White Balance) CONTROL

WB SETUP	
MODE	: AUTO
R GAIN	: ---
B GAIN	: ---
SAVE AND EXIT(ESC TO CANCEL)	

MODE AUTO, MANUAL, INCANDESCENT, FLUORESCENT, OUTDOOR

AUTO	Computes the white balance value output using color information from the entire screen automatically.
INCANDESCENT	Auto white balance mode that is compatible with incandescent lamps.
FLUORESCENT	Auto white balance mode that is compatible with fluorescent lamps.
OUTDOOR	Outdoor white balance mode
MANUAL	Manual mode, you can change R and B Gain manually.

R GAIN 0 ~ 255

B GAIN 0 ~ 255

R GAIN / B GAIN modes are controllable only in MANUAL Mode.

• AE CONTROL

AE SETUP	
MODE	: AUTO
DSS	: OFF
IRIS	: AUTO
SHUTTER	: AUTO
BRIGHT	: 10
GAIN LIMIT	: 07
NIGHT SHOT	: AUTO
ADDITIONAL AE	
SAVE AND EXIT(ESC TO CANCEL)	

MODE AUTO, MANUAL, I.PRIO, S.PRIO

AUTO	Auto exposure mode
MANUAL	Variable Iris, Shutter speed
I.PRIO	Variable Iris, Auto Shutter speed
S.PRIO	Variable Shutter speed, Auto Iris

DSS OFF, x2 ~ x8

IRIS F1.8 ~ F32

SHUTTER 1/25 (30) ~ 1/30000

BRIGHT 0 ~ 20

GAIN LIMIT 0 ~ 7

NIGHT SHOT AUTO, ON, OFF, GLOBAL

NOTE: Values in () are for NTSC Camera.

The NIGHT SHOT option removes the IR cutoff filter of the camera and makes the camera sensitive to near infrared.

AUTO Camera goes in to B&W mode at low light.
GLOBAL Controlled by the keyboard

(NOTE: GLOBAL function operates F2E protocol only)

The operator can enable NIGHT SHOT for all dome cameras at the same time.

If the NIGHT SHOT mode is set to GLOBAL, "999" + **ENTER** will turn Off the NIGHT SHOT mode and "888" + **ENTER** will turn On the NIGHT SHOT mode.

ON B/W mode
OFF Color mode

NOTE: AUTO in NIGHT SHOT function is not applied in "MANUAL" mode of AE Control.

ADDITIONAL AE

ADDITIONAL AE SETUP		
WDR	:	OFF
WDR WEIGHT	:	--
BLC	:	OFF
HLC	:	OFF
HLC LEVEL	:	--
HLC COLOR	:	---
DEFOG	:	OFF
EXIT(ESC TO EXIT)		

WDR OFF, ON, NIGHT OFF (**NOTE: When ON, BLC will be disabled.**)
WDR WEIGHT LOW, MID, HIGH
BLC OFF, ON (**NOTE: When ON, WDR will be disabled.**)
HLC OFF, ON
HLC LEVEL 0 ~ 20
HLC COLOR BLACK, WHITE, YELLOW, CYAN, GREEN, MAGENTA, RED, BLUE
DEFOG OFF, ON

• CAMERA CONTROL

CAMERA CONROL		
D/N LEVEL	:	MID
D/N DELAY	:	03 SEC
CHROMA	:	06
GAMMA	:	2
DNR	:	MID
DIS	:	OFF
SAVE AND EXIT(ESC TO CANCEL)		

D/N LEVEL LOW, MID, HIGH
D/N DELAY 1 ~ 60 seconds
CHROMA 0 ~ 20
GAMMA 0 ~ 4
DNR OFF, LOW, MID, HIGH
DIS OFF, ON

3.10 Dome Communication

To prevent damage, each dome camera must have a unique address (ID).
The factory default setting is 1.

DOME COMMUNICATION	
	\$
DOME ID	: 0001
PROTOCOL	: AUTO
BAUDRATE	: 9600
PARITY	: NONE
TERMINATION	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

DOME ID	1 ~ 3999
PROTOCOL	AUTO, F2/F2E, PELCO-PD
BAUDRATE	2400, 4800, 9600, 19200, 38400 bps
PARITY	NONE, EVEN, ODD
TERMINATION (RS-485)	OFF, ON

The device which is connected at end of line, whether it is a dome camera or keyboard, must have the cable for communication terminated by setting the appropriate DIP switch. Without proper termination, there is potential for control signal errors. Total length of the cable for communication should not exceed 4000 ft (1.2 km).

3.11 Alarm

ALARM SETUP (CTRL KEY)						
NO	PRI	FUN	IN	OUT	HOLD	LATCH
1	1	001	NO	OUT1	03	OFF
2	1	---	OFF	OFF	03	OFF
3	1	---	OFF	OFF	03	OFF
4	1	---	OFF	OFF	03	OFF
DWELL				: 03 SEC		
ALARM OUT SETUP						
SAVE AND EXIT(ESC TO CANCEL)						

NO (Number)	Alarm input number
PRI (Priority)	The lower number has higher priority. (0 ~ 4)
FUN (Function)	Stored function number to be called by alarm.
IN (Input)	NO/NC – normally open/closed, OFF – ignore
OUT (Output)	OUT1 ~ OUT2 – 5VTTL output, OFF – no output
HOLD	Alarm will be held for programmed time. (03 to 99 seconds)
LATCH	ON – Alarm message will remain on the screen even though alarm input is deactivated. OFF – Alarm message will disappear from the screen after programmed hold time when alarm input is deactivated.
DWELL	Means the dwell time during multiple alarms, 03 to 99 seconds.

ALARM OUT SETUP	
OUT1	: ALARM
OUT2	: 1 MIN
EXIT(ESC TO EXIT)	


ALARM: Alarm output is operated during an alarm operation or by the short key of the keyboard.

1 ~ 5 MIN (minute): Alarm output is operated during this setting time only by the function run of the dome menu or the short key of the keyboard.


NOTE: This 1 ~ 5 MIN setting is not operated by an alarm.

There are 5 levels of priority. The function can be selected by Preset, Auto scan, Pattern or Tour and "0" is the highest priority. Lower priority alarms won't be serviced until the higher priority alarm is completed. Equal priority alarms will be serviced repeatedly with the dwell time.

3.12 Dome Setup

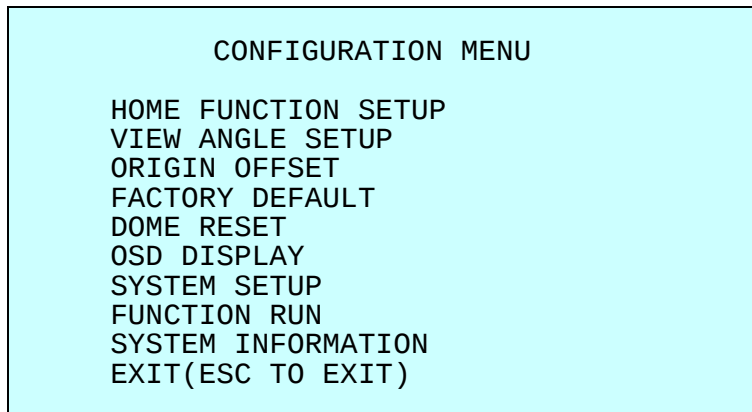

• HOME FUNCTION SETUP

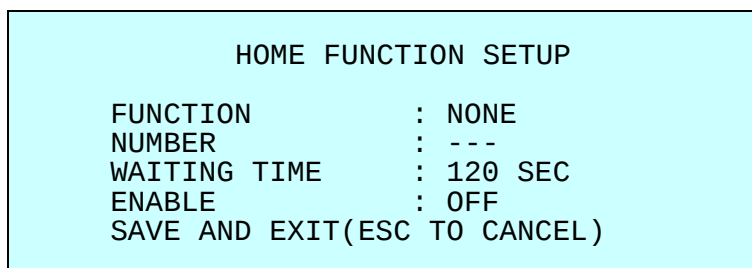

FUNCTION	NONE, TOUR, PATTERN, AUTO SCAN, PRESET
NUMBER	---
WAITING TIME	10 ~ 240 seconds
ENABLE	ON, OFF

The Home Function can be set so that the camera automatically goes to Tour, Pattern, Auto Scan or Preset after the keyboard or DVR has been idle for a specified amount of time.

For example, if the controller is idle for 120 seconds, the camera goes to Preset 1.

Follow these steps to program the Home position:

1. Select "**FUNCTION**" by pressing the **Right** or **Left** key to scroll through the None, Tour, Pattern, Auto Scan or Preset functions.
2. Select "**NUMBER**" and press the **Right** or **Left** key. The recorded function number will scroll.
3. Select "**WAITING TIME**" and press the **Right** or **Left** key to select from 10 to 240 seconds.
4. Select "**ENABLE**" and turn to ON or OFF by pressing the **Right** or **Left** key.

• VIEW ANGLE SETUP

VIEW ANGLE SETUP	
PANNING RANGE	
FLIP	: 90°
TILT ANGLE LIMIT	: 07°
SAVE AND EXIT(ESC TO CANCEL)	

FLIP OFF, AUTO, 90°, 100°, 110°, 120°

OFF: The dome camera moves until 90° vertically.

AUTO: When the camera reaches the floor directly above the moving object, it will stop.

At that time, release the controller instantly and pull it down again to run the auto-flip function.

When you use the panning range, it is recommended to use the flip mode to AUTO.

90°, 100°, 110°, 120°: Allows the image to flip digitally when the camera moves over the setting angle vertically.

TILT ANGLE LIMIT -10° ~ 10°

This option is designed to limit the view angle as there is some obstruction in zooming out on specific areas of the tilt angle.

NOTE: Focus issues may occur in certain conditions.

PANNING RANGE

When the dome camera is installed near a wall, panning range can be limited by user.

PANNING RANGE SETUP (CTRL KEY)	
RIGHT LIMIT	: 000.0
LEFT LIMIT	: 000.0
ENABLE	: OFF
SWAP	: OFF
AUTO PAN	: ON
SAVE AND EXIT(ESC TO CANCEL)	

1. Place the dome camera under 90 degree vertically.
2. Set "**RIGHT LIMIT**" by pressing the **Right** key.
3. Set "**LEFT LIMIT**" by pressing the **Left** key.
4. Set "**ENABLE**" to ON to use.

To exchange the right and the left limit, set "**SWAP**" to ON.

To apply limits on the auto pan (endless panning), set "**AUTO PAN**" to ON.

NOTE: When the flip mode is 90°, 100°, 110° or 120° and you moves over 90° vertically, the panning range operates in opposite side.

- **ORIGIN OFFSET**

OFFSET SETUP
(CTRL KEY)

PAN OFFSET : 000.0
TILT OFFSET : 000.0
ENABLE : OFF
SAVE AND EXIT(ESC TO CANCEL)

This feature is useful to align a new dome camera exactly the same as the previously installed dome camera.

Dome camera's origin set and all data initialize option do not override offset values. Only the default set option in this menu will set the offset value to zero. This can be used to avoid ceiling obstructions.

- **FACTORY DEFAULT**

Select "**FACTORY DEFAULT**" to initialize the data.

FACTORY DEFAULT
ARE YOU SURE ?
CANCEL
OK

- **DOMES RESET**

DOMES RESET
ARE YOU SURE ?
CANCEL
OK

This feature is used to re-calibrate the orientation of a selected dome camera. Origin offset value is not affected by this function. (Offset is still valid after origin set.)

• OSD DISPLAY

OSD DISPLAY SETUP	
LANGUAGE	: ENGLISH
TITLE	: DOMEID
DOME OSD	: ON
FOCUS/EXPOSURE	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

LANGUAGE Select the desired language.

TITLE up to 6 characters

DOME OSD ON, POSITION, ON(ZOOM), ZOOM, OFF
All display or title will disappear when DOME OSD DISPLAY is set to OFF.

FOCUS/EXPOSURE ON, OFF
ON: FOCUS and EXPOSURE displays. (AF AE)

• SYSTEM SETUP

SYSTEM SETUP	
MOTOR SETUP	
PASSWORD EDIT	
ORIGIN CHECK	
CALIBRATION	: ON
PASSWORD ENABLE	: OFF
MENU TIMEOUT	: OFF
DOME ANSWER	: ON
PRESET FOCUS	: AUTO
SAVE AND EXIT(ESC TO CANCEL)	

CALIBRATION ON (Auto origin check), OFF

PASSWORD ENABLE ON (requires the password to enter menu), OFF

MENU TIMEOUT ON (5 minutes), OFF (always menu display)

DOME ANSWER ON, OFF (no acknowledge command from the dome)
This option is helpful to escape the collision of the command using some DVR.

PRESET FOCUS AUTO, MANUAL, ONE PUSH
This option set the default mode of the focus when you save the Preset.

MOTOR SETUP

Motor Setup menu provides the pan and tilt speed of a camera. User can set the desired speed with pressing the **Right** or **Left** key.

MOTOR SETUP		
PROPORTIONAL P/T	:	ON
P/T MODE	:	NORMAL
SLOW PAN MAX	:	40
SLOW TILT MAX	:	40
NORMAL PAN MAX	:	90
NORMAL TILT MAX	:	90
TURBO PAN MAX	:	360
TURBO TILT MAX	:	100
SAVE AND EXIT(ESC TO CANCEL)		

PROPORTIONAL P/T

ON, OFF

P/T MODE

SLOW, NORMAL, TURBO

SLOW PAN Maximum speed	19° ~ 90°/second
SLOW TILT Maximum speed	19° ~ 90°/second
NORMAL PAN Maximum speed	40° ~ 360°/second
NORMAL TILT Maximum speed	40° ~ 200°/second
TURBO PAN Maximum speed	200° ~ 380°/second
TURBO TILT Maximum speed	90° ~ 300°/second

PASSWORD EDIT

PASSWORD EDIT SETUP (CTRL KEY)	
INPUT PASSWORD	
PASSWORD:	
A B C D E F G H I J	
K L M N O P Q R S T	
U V W X Y Z 0 1 2 3	
4 5 6 7 8 9 ()	
SAVE AND EXIT(ESC TO CANCEL)	


You can change the password with 6-digit character in this menu.

The default password is **555555**.

When the password enable is on, the input password window displays to enter the menu. At this time, move the cursor to the desired character with the controller and press the **IRIS Open** key.


ORIGIN CHECK

If you find the dome camera in the wrong position during operation, execute this origin check and the dome camera will return to the right position after the origin check operation.

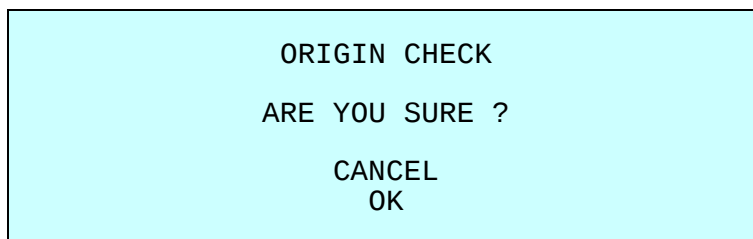

• FUNCTION RUN

This Function Run menu allows you to execute the function when you use the keyboard or DVR without the function keys (Preset, Pattern, Tour and Scan).

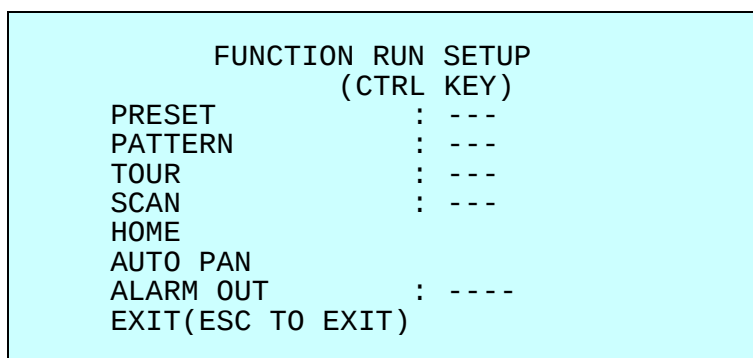

1. Select the desired Function by pressing the **Up** or **Down** key.
2. Select the number by pressing the **Tele** or **Wide** key in PRESET, PATTERN, TOUR and SCAN.
3. Press the **IRIS Open** key to execute.

NOTE: To execute the function, you should save the function (PRESET, PATTERN, TOUR and SCAN) first.

- HOME

Select "HOME" and press the **IRIS Open** key. The dome camera goes to the default position that it returns to after an assigned period of inactivity passes. The default position may be a Preset, Tour, Pattern or no action.

- AUTO PAN

You can execute the endless auto pan to turn in one direction continuously by selecting Auto-Pan.

- ALARM OUT

This function can operate only when the alarm out setup has the time in the alarm menu.

Ex)

```
ALARM OUT SETUP

OUT1  : ALARM
OUT2  : 1 MIN
EXIT(ESC TO EXIT)
```

You press the **IRIS Open** key then that alarm out operates during the setting time only.

- **SYSTEM INFORMATION**

```
SYSTEM INFORMATION

CAMERA TYPE      : xxxx-Vx.xx
H/W VERSION      : Vx.xx-xxxx
ROM VERSION      : Vx.xxxxxxx
PROTOCOL         : xxxx
BAUDRATE         : 9600(NONE)

EXIT(ESC TO EXIT)
```

The system information provides essential information about the dome camera if service is required. This screen displays the camera type and ROM version. The information on this screen cannot be modified.

Appendix A — Specifications

Model		HD Analog Camera
IMAGE		
Lens		Optical Zoom 20X 4.7mm ~ 94.0mm
Angle of View		55.5° (H) ~ 3.0° (H)
Image Sensor	Type	1/2.8" SONY STARVIS CMOS sensor
	Pixels	1945 (H) x 1097 (V)
Min. Illumination		Color : 0.35 Lux @ 50IRE BW : 0.013 Lux @ 50IRE
Scanning Mode		Progressive Scan
Wide Dynamic Range		True WDR
Day and Night Mode		True D/N (Auto, Day, Night)
Noise Reduction		3DNR
Digital Zoom		16X
Exposure Control		Auto, Manual, Shutter Priority, Iris Priority
White Balance Control		Auto, Manual, Incandescent, Fluorescent, Outdoor
Back Light Compensation		Yes
Image Effect		Flip (Digital)
Shutter Speed		25/30fps : Auto (1/30,000 ~ x8 sec.), Manual 50/60fps : Auto (1/50,000 ~ x8 sec.), Manual
DIS		Yes
Defog		Yes
VIDEO		
Resolution		HD-TVI : 1080p @ 25/30fps, 720p @ 25/30/50/60fps AHD : 1080p @ 25/30fps
Video Output		HD-TVI or AHD, Composite
PTZ Function		
Pan Range		360° Endless
Pan Speed		Max. 380°/sec. (Preset)
Tilt Range		-10° ~ 190°
Tilt Speed		Max. 380°/sec. (Preset)
Auto Calibration		0.1° ~ 6°
Auto Scan		1 Auto Pan & 16 Auto Scans
Preset		240
Tour		8
Pattern		8
Home Function		Yes
Privacy Mask Zone		16 Programmable Zones
EXTERNAL IN/OUT		
Video HD Output		BNC Jack
Video Composite Output		BNC Jack
Alarm		4 Inputs, 2 Outputs (Terminal Block)
Control		Coaxial Communication RS-485, Baud Rate: 2400 ~ 38400 bps (Default: 9600 bps)
ID (Camera Address)		1 ~ 3999

ETC	
Operating Humidity	0 ~ 90%RH (Non-condensing)
Operating Temperature	-10°C ~ 50°C
Operating Temperature (with Heater)	-30°C ~ 50°C
Power Supply	12VDC, 24VAC
Power Supply (with Heater)	24VAC
Power Consumption	1.0A (12.0W) @ 12VDC, 24VAC
Power Consumption (with Heater)	1.5A (22.0W) @ 24VAC
Dimensions	See dimension drawing
Net Weight	Approx. 1.6kg
Ingress Protection	IP66

* Specifications are subject to change without notice *

UNIT : mm

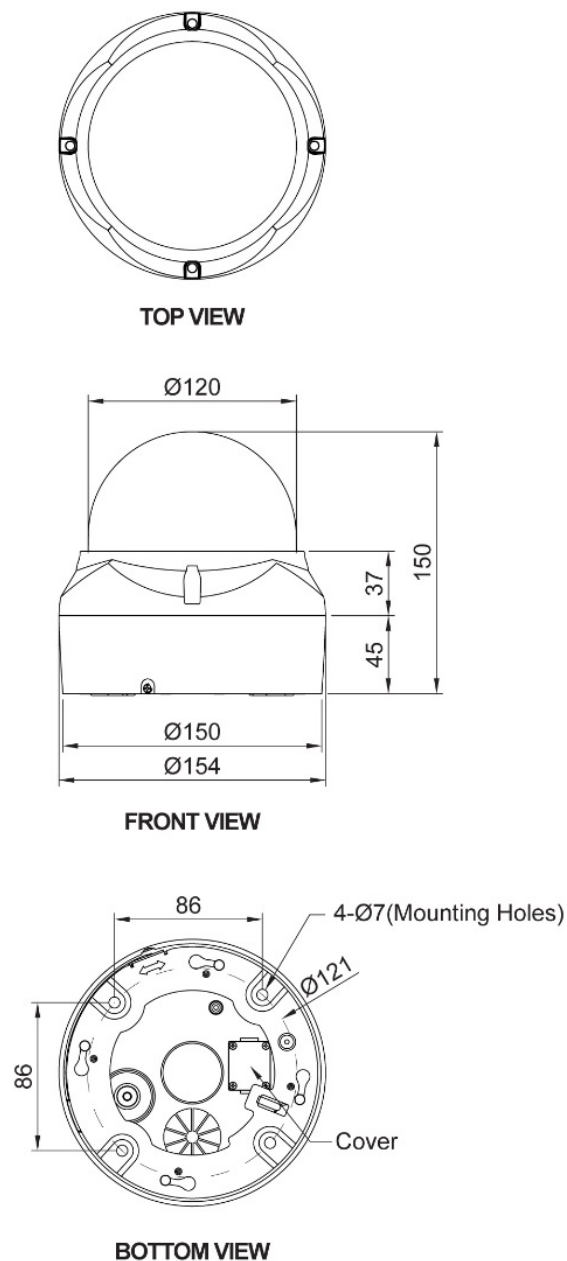


Figure – Dimension

Appendix B — Troubleshooting

If problems occur, verify the installation of the camera with the instructions in this manual and with other operating equipment. Isolate the problem to the specific piece of equipment in the system and refer to the equipment manual for further information.

Problem	Possible Solution
No video.	Verify that power is connected to all pieces of equipment in the system. Verify that the power switches are in the ON position. Check the video connections.
Poor video quality.	Check that the BNC connectors are inserted properly. Check the voltage level of the dome camera. Cable for video is shielded.
Dome cameras lose their positions.	Reset the cameras using the Dome configuration menus. Check that the dome cameras are inserted properly in the base. Check the voltage level of the dome camera.



20X 2MP HD ANALOG SPEED DOME CAMERA



50304118A