





Mini ViP Monitor Art. 6722W, Art. 6742W



Warning

Intended use

This Comelit product was designed for use in the creation of audio and video communication systems in residential, commercial or industrial settings and in public buildings or buildings used by the public.

Installation

All activities connected to the installation of Comelit products must be carried out by qualified technical personnel, with careful observation of the indications provided in the Manuals / Instruction sheets supplied with those products.

Wires

Cut off the power supply before carrying out any maintenance procedures.

Use wires with a cross-section suited to the distances involved, observing the instructions provided in the system manual.

We advise against running the system wires through the same duct as the power cables (230V or higher).

Safe usage

To ensure Comelit products are used safely:

- carefully observe the indications provided in the Manuals / Instruction sheets
- make sure the system created using Comelit products has not been tampered with / damaged.

Maintenance

Comelit products do not require maintenance aside from routine cleaning, which should be carried out in accordance with the indications provided in the Manuals / Instruction sheets.

Any repair work must be carried out

- for the products themselves, exclusively by Comelit Group S.p.A.,
- for systems, by qualified technical personnel.

Disclaimer

Comelit Group S.p.A. does not assume any responsibility for

- any usage other than the intended use
- non-observance of the indications and warnings contained in this Manual / Instruction sheet.

Comelit Group S.p.A. nonetheless reserves the right to change the information provided in this Manual / Instruction sheet at any time and without prior notice.

Table of contents


Key functions	
Key to the indicator LEDs	
ViP Mini Monitor	
Date and time settings	4
Functions available	4
Intercoms	4
Cameras	4
Actuators	4
Doors open	
Answering service setup	
Video memory	
Record always	
Messages	
Video memory	
Call divert	
Wi-Fi connection (applies to art. 6742W)	
Art. 6742W	
Wi-Fi connection status	
Key to symbols	
· ·, ·, ···· ··············	

Description of the monitor......3

Access point	6
Wi-Fi off	6
Connection absent	6
Signal strength	6
WiFi setup via the monitor	6
Manual procedure	7
WiFi setup via the COMELIT app	7
Wi-Fi not connected notification	7
Enable app registration	7
User setup menu	8
Language	8
Keypad lock	8
Information	8
Volume adjustment	8
Backlight adjustment	8
Melody settings	9
User administration (applies to art. 6742W)	9
Reset (applies to art. 6742W)	9
Installer setup menu	
NAVIGATION TREE	9



Description of the monitor

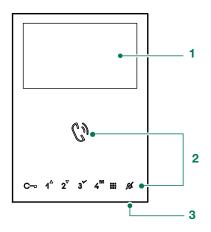

- 1. Monitor LCD 4,3"
- 2. Soft-touch keys
- 3. Microphone

Built-in magnetic induction loop

Key functions



MENU

- ▶ SHORT PRESS: turns display on/off
- ▶ LONG PRESS (> 5s): access SETUP menu
- ► SHORT PRESS during menu navigation: call ESC function / previous window / monitor standby



AUDIO

Allows you to answer incoming calls.

- √ Incoming call:
 - ▶ Press to start the conversation
 - Press again to interrupt the conversation
 - » (*) It is possible to resume the conversation for as long as the LED continues to flash
- ► LONG PRESS (10s): enable the *Hands Free* function (on receipt of a call the audio will be activated automatically)

C→ LOCK-RELEASE

Opens the corresponding door lock

▶ SHORT PRESS: door opening

1234 PROGRAMMABLE KEYS

 SHORT PRESS: implement the programmed function



ARROW KEYS

- LONG PRESS during a call: increase /reduce audio volume
- ► DURING MENU NAVIGATION up / down / right / left



CONFIRM SELECTION

- SHORT PRESS: confirm a selection, select / deselect an option
- ▶ LONG PRESS: Save setting



MESSAGE MENU

▶ LONG PRESS (> 3s): access message menu



PRIVACY/DOCTOR

- SHORT PRESS: activate / deactivate Privacy function
- LONG PRESS: (if enabled) enable / disable automatic door opening on receipt of call from external unit (Doctor function)

Key to the indicator LEDs



- STEADY LED in standby: Hands Free function activated
- ► FLASHING LED: Incoming call (*)
- ▶ STEADY LED in call: in communication



- ▶ 1 FLASH: door open confirmed
- ▶ FLASHING LED: Incoming call
- ► FLASHING LED (slow): door open



- ► STEADY LED: Video memory / Call divert activated
- FLASHING LED: signals presence in directory of a video message that has not been viewed




- 4 FLASHES: the device called is busy
- 3 FLASHES EVERY 5 SEC.: Doctor function activated
- STEADY LED: Privacy function active (Ringtone in silent mode)
- STEADY AND FLASHING LED: Doctor and Privacy active

ViP Mini Monitor

The menu icons vary depending on the type of system installed and the functions available.

▶ Press the soft-touch key to access the display and view the main menu

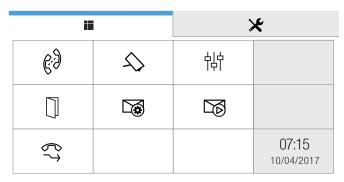

- ► Scroll through the menu using the arrow keys ▲▼
- ► Confirm the selection by clicking on the tick symbol \
- Press Exit to return to previous screen / turn off the display

Date and time settings

This function allows you to set the time and date of the device.



▶ Access the dedicated section



Set the desired values for day / month / year / hours / minutes.



Save the setting


Functions available

Intercoms

This function allows you to call addresses saved in the directory.



 Access the dedicated section, then select the device you wish to call from the directory

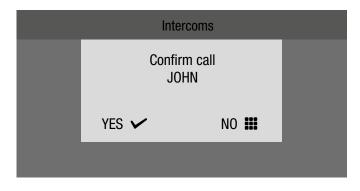

Cameras

This function allows you to view a directory of cameras and to start live streaming.



 Access the dedicated section, then select the camera you wish to interrogate from the directory

Actuators

This function allows you to activate an actuator by selecting it from the programmed directory.



 Access the dedicated section, then select the command you wish to activate from the directory

Doors open

This function allows you to view a directory of doors to check their status (open/closed).



Access the dedicated section to view the directory, then select the door to interrogate in order to start live streaming from the camera.



Answering service setup

This function allows you to manage the parameters for the device's video memory function.



▶ Access the dedicated submenu

Memory
Video memory
Record always

Video memory

This function automatically starts audio/video recording in the event of no reply.

- ▶ Tick the box to enable the function
- » The icon in the main menu changes colour
- » The soft-touch key LED illuminates (Steady light)

Record always

This function automatically starts audio/video recording on receipt of a call from an external unit.

► Tick the box to enable the function.



Both functions must be ticked


Messages

This function allows you to access the ViP messaging system of the device.



 LONG PRESS (> 3s) to access the dedicated video memory submenu



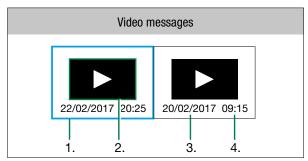

- 1. Selected video
- 2. Example of a previously viewed recording
- 3. Date
- 4. Time
- ► Click ✓ on the recording preview to START playback
- ► Click to STOP playback
- ▶ Long press to delete the video recording.

Video memory

This function allows you to enable/disable the video memory on the device.



- » The icon in the main menu changes colour
- The soft-touch key LED illuminates (Steady light)

Call divert

This function allows you to quickly enable/disable the call divert function.



- ► Scroll through the menu to the icon and press to confirm and enable the function
- » The icon in the main menu changes colour

Wi-Fi connection (applies to art. 6742W)

The icon in the main menu offers quick access to the Wi-Fi options/functions of the device while indicating its connection status.



▶ Enter dedicated section

Art. 6742W

Wi-Fi connection status

Key to symbols



Access point

If the system requires wireless connection of the monitor, link the device with the local router.



Wi-Fi off

If the system requires wireless connection of the monitor, access the relevant setup menu and confirm "Enable Wi-Fi".



Connection absent

Monitor Wi-Fi reception is enabled, therefore you need to check the router conditions (on/off, correct operation, distance from the monitor, correct password).

Signal strength



Excellent



Good




Moderate




Weak


WiFi setup via the monitor

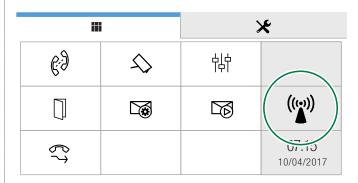


If the system requires wireless connection of the monitor, access the relevant setup menu and confirm "Enable Wi-Fi". (Default ON)

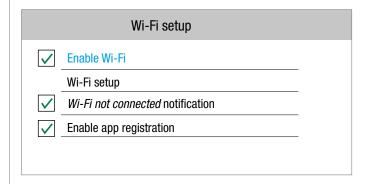

Select Wi-Fi setup to identify the available networks.

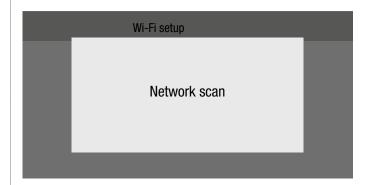


We recommend linking the monitor to your router by means of the WPS button. If the router does not have a WPS button, proceed by entering the password manually.

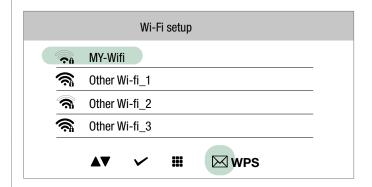



Procedure via WPS

After scanning the networks, press on the monitor for secure linking via WPS and follow the instructions.

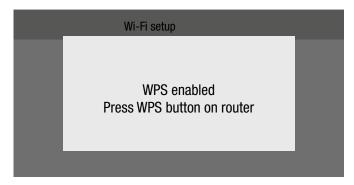


On completion of the operation a confirmation message will be displayed.

Install the COMELIT application on your smartphone to ensure you have all the device functions at your disposal.

Instructions at pro.comelitgroup.com > **6742W** > User manual for Comelit Application.

Manual procedure

After scanning the networks, select your router's network and enter the password, following the instructions on the display.

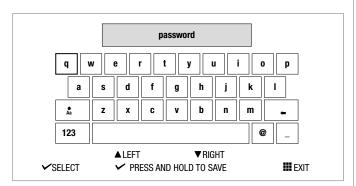

On completion of the operation a confirmation message will be displayed.

Install the COMELIT application on your smartphone to ensure you have all the device functions at your disposal.

Instructions at pro.comelitgroup.com > **6742W** > User manual for Comelit Application.

 
WiFi setup via the COMELIT app

Setup can also be carried out via the app. Refer to the dedicated section on the website pro.comelitgroup.com > 6742W > Smart registration.

Wi-Fi not connected notification

The lack of Wi-Fi connection will prevent calls from being received on a smartphone (and, in some types of system, on the monitor too) and cancels all main functions that can be controlled via the app.

The monitor provides *pop-up* notification in the event that there is no Wi-Fi connection between the monitor and the router.

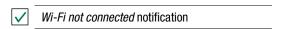

This pop-up can be enabled / disabled as desired.

Enable app registration

The tick permits a new user to register his/her own smartphone in order to gain access to monitor functions, or prohibits him/her from doing so.

✓	Enable app registration

User setup menu



LONG PRESS (> 5s)

- ► Select User setup menu ✓
- ▶ Select one of the options in the list

SETUP	
Language	
Lock keypad	-
Information	
Volume adjustment	
Backlight adjustment	
Melody settings	-
	-

Language


You can change the interface language.



► Position the cursor on the desired option, then confirm the selection ✓ or exit ■

Keypad lock


This function can be used to lock the device touch screen for 60 seconds for cleaning purposes.

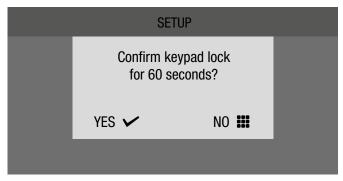

» After 60 seconds, the screen is unlocked automatically

Information


This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.).

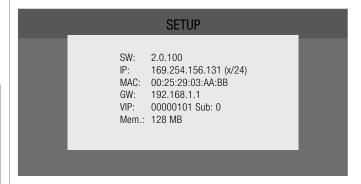


Press the icon to exit the screen.

Volume adjustment

This menu allows you to manage and adjust the audio volume of the keys.

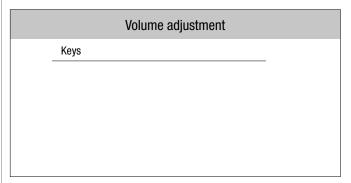

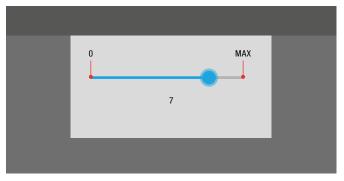


- ▶ Increase/decrease the value using the arrow keys ▲▼
- ► Confirm the selection by clicking on the tick symbol ✓
- ▶ Press Exit **•••** to return to previous screen

Backlight adjustment

It is possible to increase and reduce the monitor backlighting level.



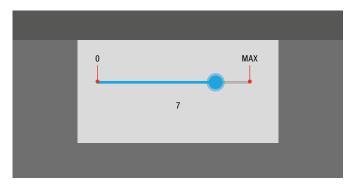

- Increase/decrease the value using the arrow keys $extbf{\Delta} extbf{V}$
- Confirm the selection by clicking on the tick symbol
- Press Exit to return to the previous screen

Melody settings

From the menu you can choose a melody for each of the device's call functions.

Melody settings	
External unit call	
Intercom call	
Floor door call	
Alarms	

- ▶ Scroll through the options using the arrow keys ▲▼
- ▶ Press the tick symbol ➤ to access the submenu

	Melody selection	
0	Melody 1	
	Melody 2	
0	Melody 3	
\circ	Melody 4	
0	Melody 5	
	Melody 6	-
		=

► Scroll through the options using the arrow keys ▲▼ to hear a preview of the melody and confirm the selection

 
User administration (applies to art. 6742W)

The function can be used to alternately allow a user to operate the app connected to the device, or to prohibit them from doing so.

Reset (applies to art. 6742W)

The menu can be used to reset the passwords for Wi-Fi parameters, registered apps reset and administrator password.

Installer setup menu

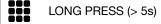

- Select Installer setup menu
- Type in the password (default = 1111) and confirm



NAVIGATION TREE

NSTALLER SETUP MENU
Directories
Intercoms
Actuators
Doors
Cameras
Key programming
- O
Lock-release
Actuator
Function disabled
1234
Intercom
Self-ignition
Alarms
Lock-release
Actuator
Function disabled
¤
Privacy / Doctor / Privacy Doctor /
Total reset
Addresses
VIP ADDRESS PROGRAMMING
Set ringtone repetition
Set call times
Awaiting reply
Talk
Intercom conversation
Reset wait time
Call divert
Activate timed divert
Alarms
Alarm
Panic
Fire
Priority call 4
Ethernet not connected indication (Art. 6742W)
Check for Ethernet conflicts - Wi-Fi (Art. 6742W)
Configure slaves (Art. 6742M/)

For programming and configuration of the internal unit and the system parameters, use the ViP Manager software, which can be downloaded from pro.comelitgroup.com

CERTIFIED MANAGEMENT SYSTEMS







W W W . C O M e l i t g r O u p . C O M Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

