

ES300W


(Weatherized Battery Powered Door Prop Alarm)

Note: During set-up

The magnet is mounted to the door frame.

The internal reed switch will indicate an opened or closed door.


Handing is programmed for left or right door mounting.

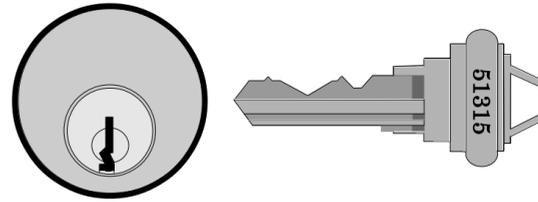

**Mortise Cylinder
RP/MC65
Sold Separately**

Status Indicator Jumper	Off	No LED indication	
	On	Armed	Red LED blinks every 6 seconds
		Disarmed	Green LED blinks every 6 seconds

DP Switch Jumper	Off	Door prop mode
	On	Door chime mode

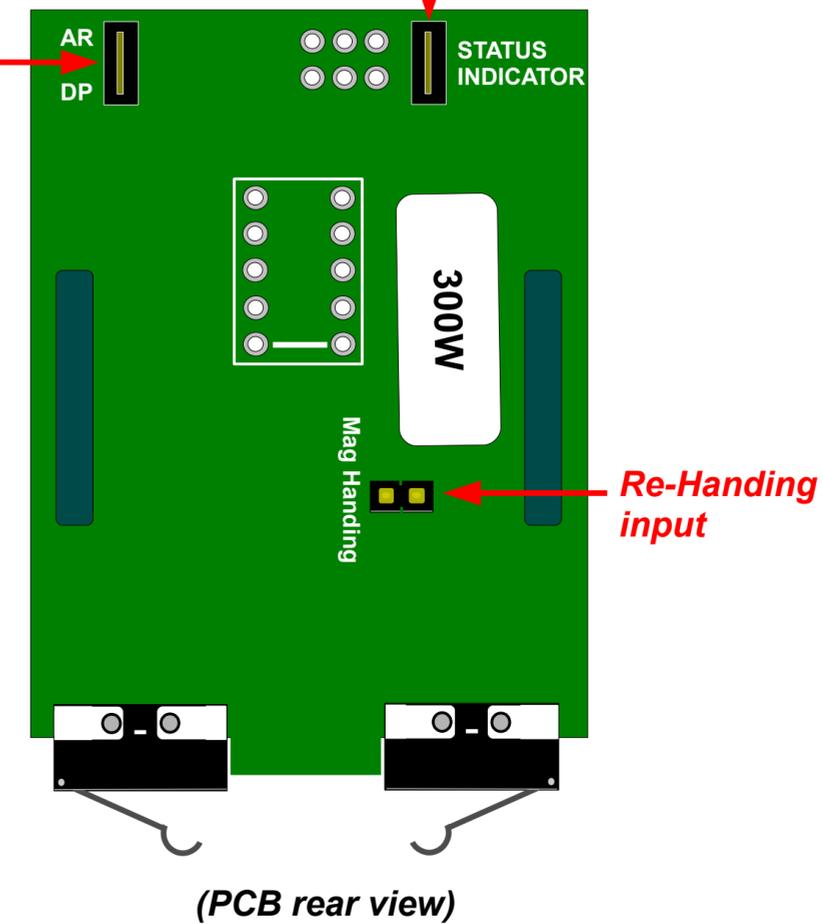

Includes:

**EMERGENCY EXIT ONLY
ALARM WILL SOUND**

Door Label




K11 Key (Side View)




9 Volt Battery



Magnet (Side View)

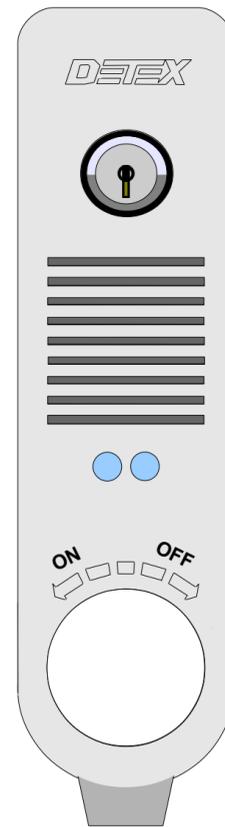

ES300W
(Front view)

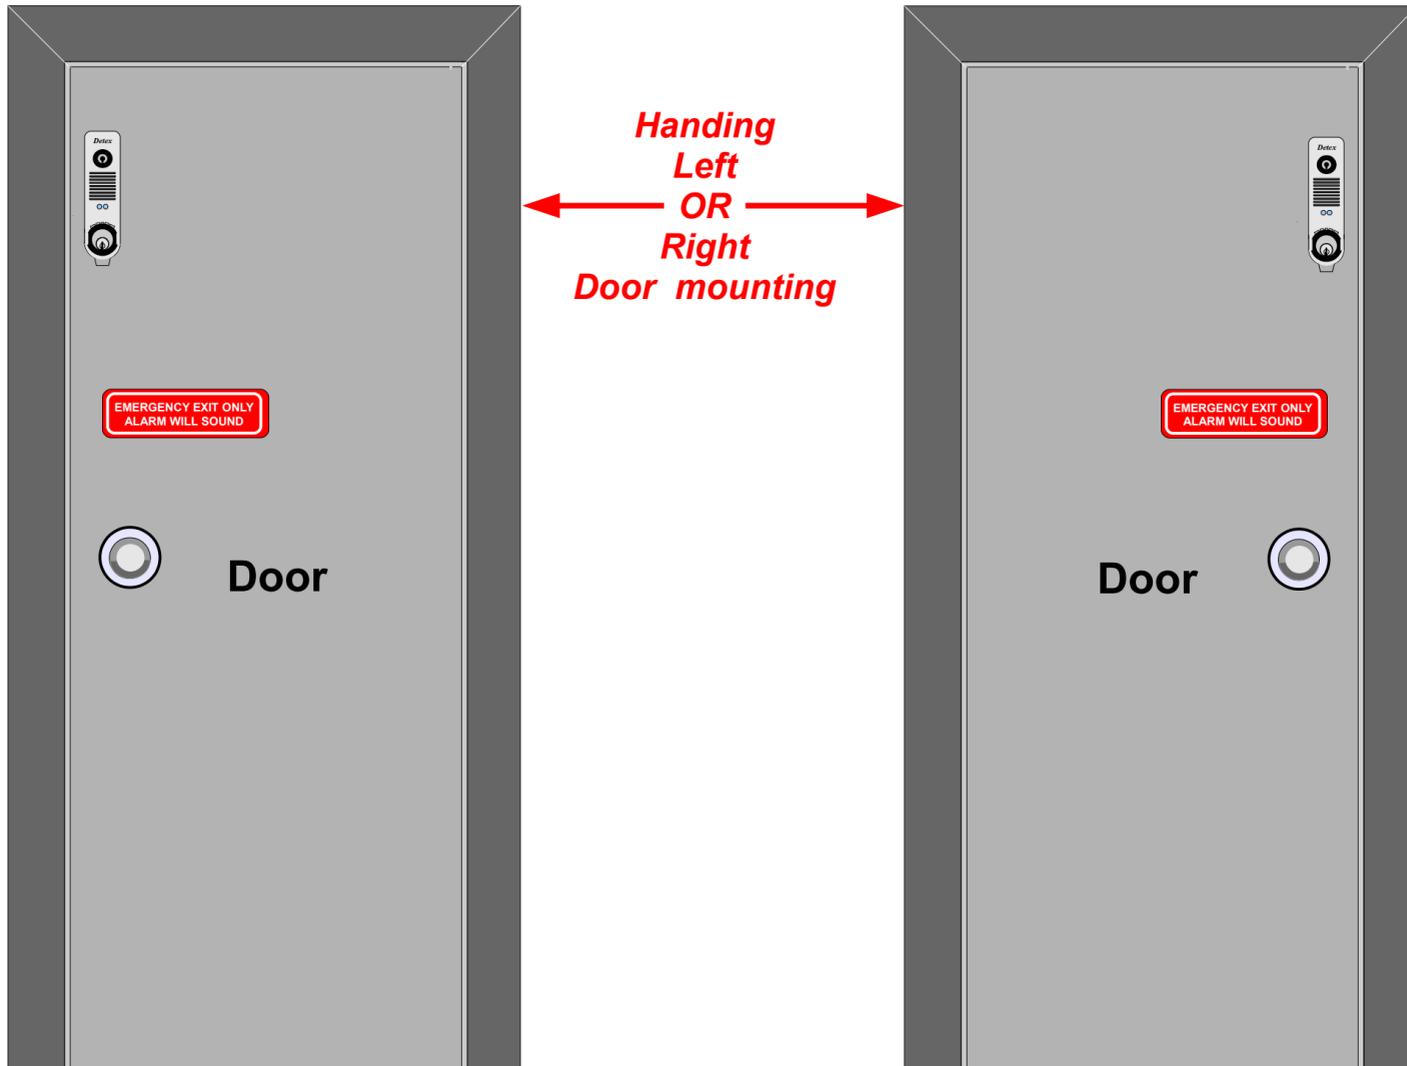

Note: Re-Handing:
A momentary short on this input will clear the left or right handing program.

Alarm Delay Time: 1 second, 15 seconds, 30 seconds, 45 seconds, 1 minute, 2 minutes, 4 minutes.

ES300WxMC65

(Weatherized Battery Powered Door Prop Alarm)

Status Indicator Jumper	Off	No LED indication
	On	Armed Red LED blinks every 6 seconds Disarmed Green LED blinks every 6 seconds

Note: During set-up



The magnet is mounted to the door frame.

The internal reed switch will indicate an opened or closed door.

Handing is programmed for left or right door mounting.

Alarm Delay Time: 1 second, 15 seconds, 30 seconds, 45 seconds, 1 minute, 2 minutes, 4 minutes.

DP Switch Jumper	Off	Door prop mode
	On	Door chime mode

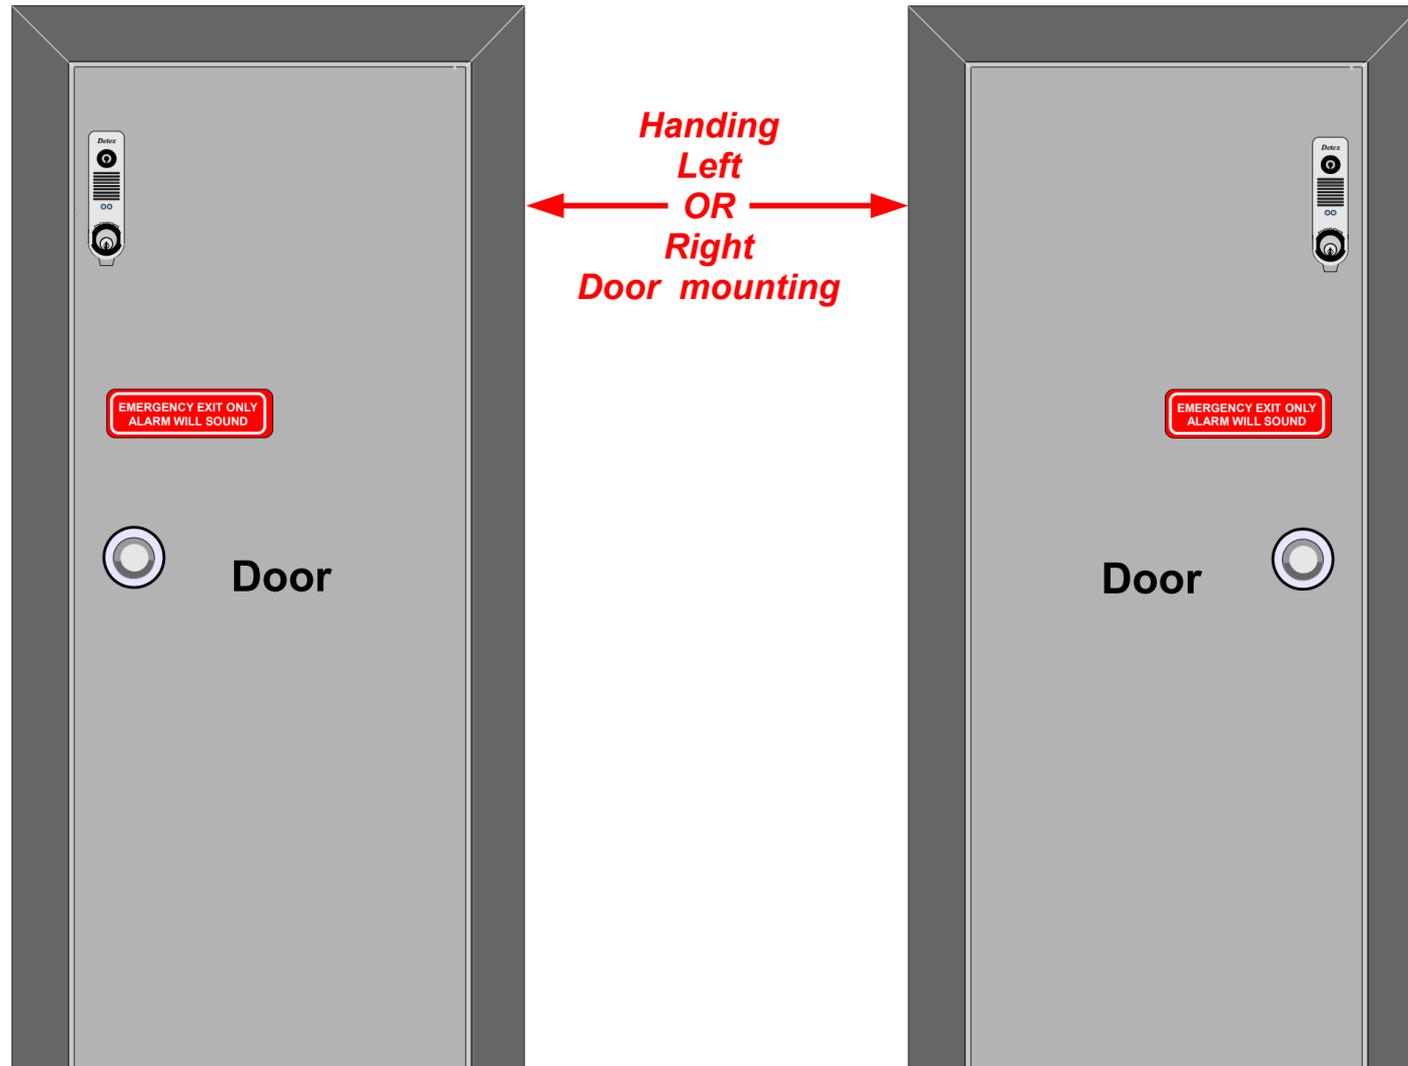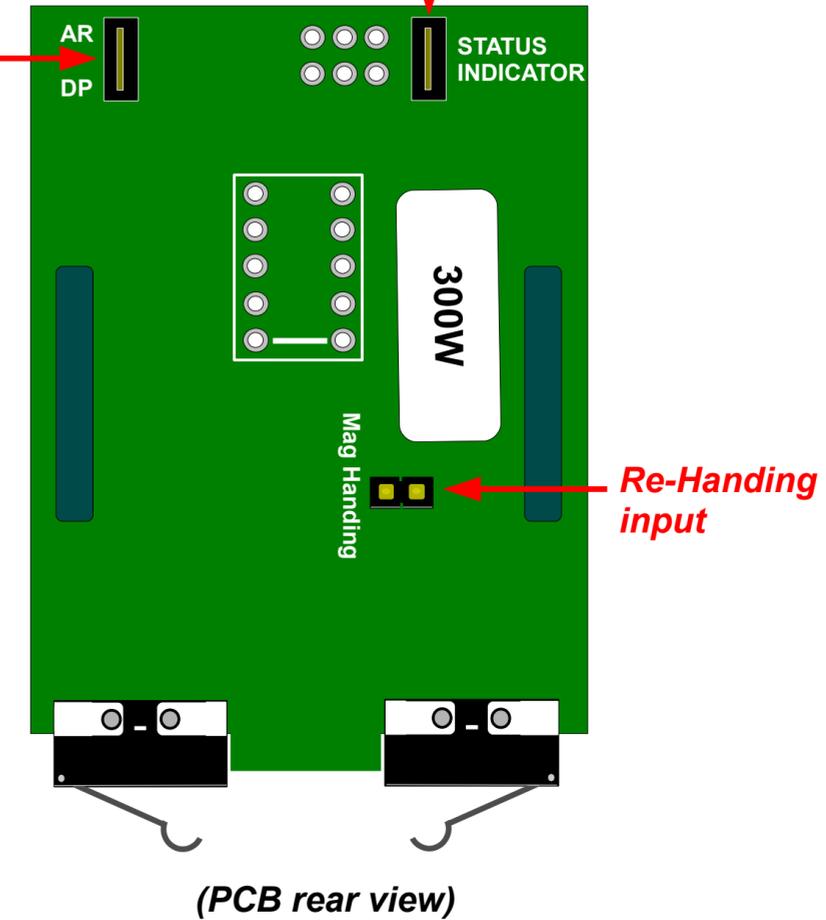

Includes:

EMERGENCY EXIT ONLY ALARM WILL SOUND


Door Label



K11 Key (Side View)



9 Volt Battery

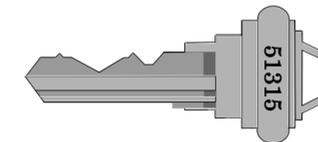

K65 Key (Side View)



Magnet (Side View)

Note: Re-Handing:
A momentary short on this input will clear the left or right handing program.

DSI!TM
DESIGNED SECURITY, INC.
1-800-272-3555