


**SRXV-PCF & SRXV-PP**  
**Pendant Ceiling Flange & Extension**  
Installation Manual

C6698M

## SRXV-PCF Dimensions

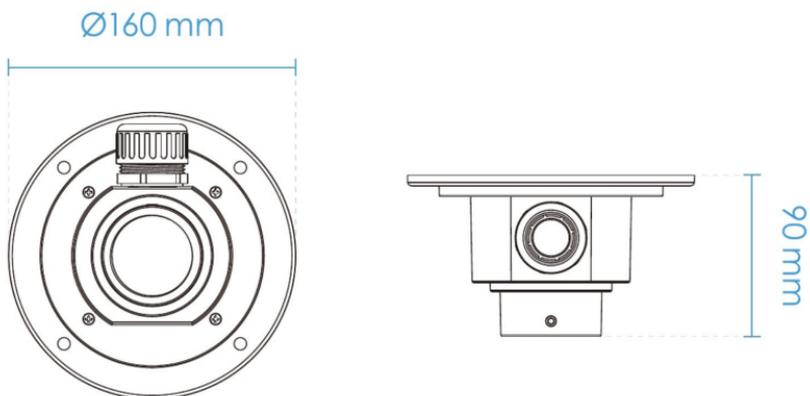

## SRXV-PP Dimensions




## Pendant Pipe Installation


Below is a sample procedure using a Pendant pipe:

1. Determine a hard surface ceiling location, and use the four mounting holes on the pendant head to mark the positions where holes will be drilled to secure the pendant head.

Note that screws are user-supplied and they should be 11mm long at least.

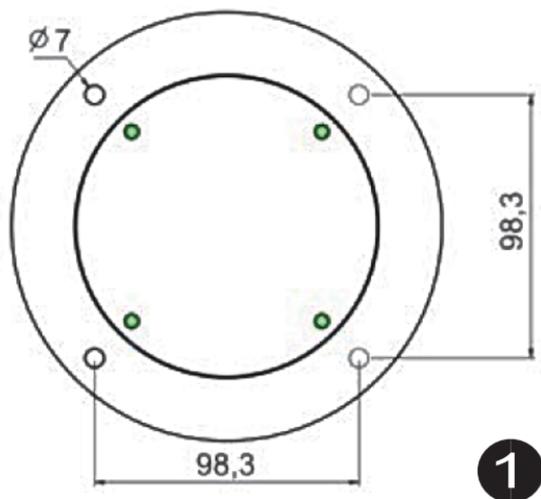

2. Drill holes on the ceiling for securing the pendant head. Secure the pendant head by hammering anchors into the ceiling and then fasten screws through it.
3. Route power lines and other cables through the side bushing and/or conduits (user-supplied), and through the pendant pipe.
4. Secure pendant pipe to the pendant head by rotating it clockwise until it is tightly fastened.

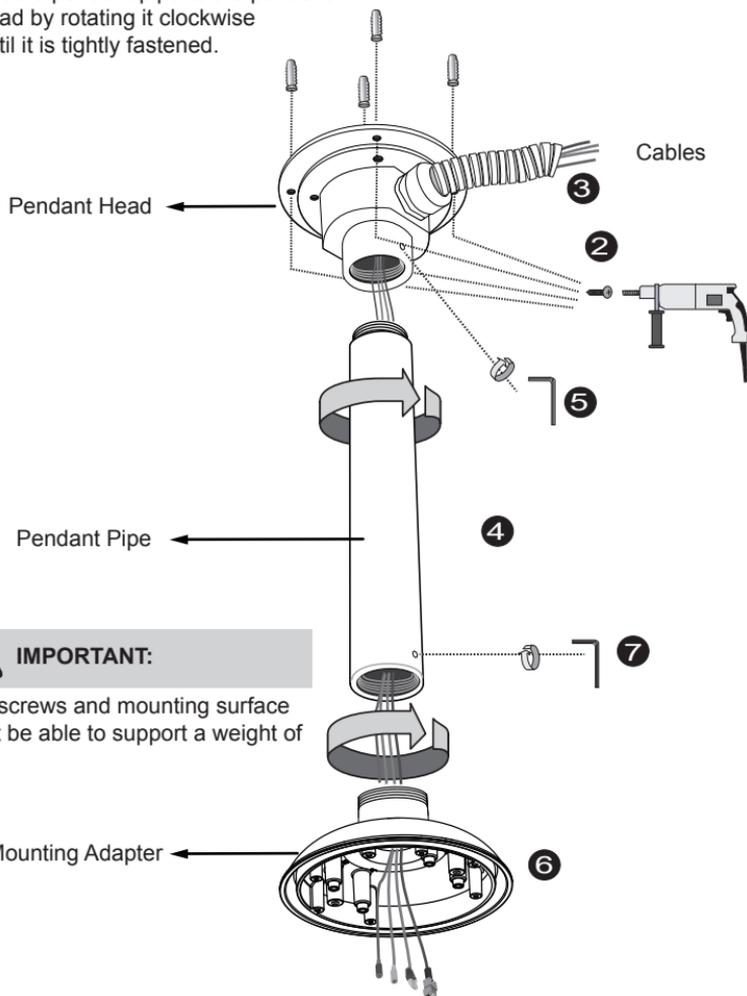

**IMPORTANT:**

The screws and mounting surface must be able to support a weight of 6 kg.

5. Secure the connection using the included hex wrench.
6. Attach mounting adapter to the pendant pipe by rotating it clockwise until it is tightly fastened.
7. Secure the connection using the included hex wrench.
8. Refer to the camera and other accessory manuals to complete the installation and set-up.

**Pelco, Inc.**

625 W. Alluvial, Fresno, California 93711

**United States USA & Canada** Tel (800)289-9100 Fax (800) 289-9150

**International** Tel +1 (559) 292-1981 Fax +1 (559) 348-1120

**[www.pelco.com](http://www.pelco.com)**