

## How To Use Your Kidde Extinguisher

Follow instructions shown on the front label of your fire extinguisher.

After the fire is out and cooktop has cooled, clean up dry chemical powder.

Special purpose kitchen range fire extinguishers are recommended only for cooking oil fires contained in cooking vessels such as pots, skillets and griddles. Use the correct type ABC or BC fire extinguishers for other common types of fire.

**WARNING:** Special use residential kitchen range fire extinguishers are not suitable for applications requiring a Class K commercial sized fire extinguisher.

**CAUTION:** The agent contained in this extinguisher is not toxic, but as with any exposure to nuisance dusts, may cause some temporary irritation. Avoid inhaling the dry chemical agent. In case of contact, flush affected area with clean, cool water. If irritation persists, contact a physician immediately. Chemical name of agent is printed on extinguisher label.


For more information on fire fighting, contact your local fire department or the U.S. Coast Guard. Additional information on extinguishers can be found in the National Fire Protection Association (NFPA) pamphlet No. 10, "Portable Fire Extinguishers."

### Mounting Your Extinguisher

Your extinguisher should be mounted so that it is easy to reach and not hidden or obstructed.

Fasten the bracket that was supplied with your fire extinguisher securely to a wall stud. Install and secure fire extinguisher properly into hanger.

Plastic wall hanger  
Gancho plástico de pared

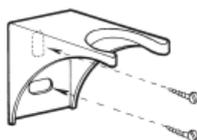

### Directions for Use:

Super heated cooking media containing animal or vegetable fats and oils has the unique ability to retain heat and re-flash after extinguishment. The dry chemical formulation contained within this fire extinguisher has the ability to not only extinguish these fires, but also mix with the hot combustible cooking media and form a blanket to inhibit potential re-flash when properly applied.

- Pull and remove locking tab.
- Start 5ft back from stove top fire.
- Aim extinguisher into cooking vessel.
- Squeeze and fully depress operating lever to initiate extinguishing agent discharge (approximate total discharge time 8 to 12 seconds).
- Empty the entire contents of the extinguisher. Sweep only as necessary to cover the inside of the cooking vessel.
- **IMMEDIATELY AFTER DISCHARGING EXTINGUISHER, TURN OFF APPLIANCE TO REMOVE SOURCE OF HEAT.**
- Once the extinguisher is empty, evacuate the home and ensure the fire department has been called.
- Never attempt to carry, move or disturb the extinguishing agent layer until it has properly cooled. Cooking media can sometimes retain enough heat to reignite for up to 15 minutes.

21008383B

## Cómo utilizar su Extintor Kidde

Siga las instrucciones indicadas en la etiqueta frontal de su extintor.

Después de extinguir el fuego y que el tope de la cocina se enfríe, limpie con un polvo químico seco.

Los extintores especiales para cocinas se recomiendan únicamente para llamas causadas por aceites de cocinar contenidos en los recipientes de cocinar, tales como las ollas, sartenes y planchas. Utilice el tipo correcto de extintores ABC o BC para los demás tipos comunes de incendios.

**ADVERTENCIA:** Los extintores especiales para cocinas de uso residencial no son apropiados para aplicaciones que requieran un extintor comercial Clase K.

**PRECAUCIÓN:** El agente contenido en este extintor no es tóxico, pero al igual que ocurre con cualquier exposición a polvos inertes, puede causar alguna irritación temporal. Evite inhalar el agente químico seco. En caso de contacto, enjuague el área afectada con agua limpia y fresca. Si la irritación persiste, comuníquese con un médico inmediatamente. El nombre del agente químico está impreso en la etiqueta del extintor.

Para obtener más información sobre la extinción de incendios, comuníquese con su departamento local de bomberos o con la Guardia Costera de EE.UU. Puede encontrar información adicional sobre los extintores en el folleto No. 10, "Extintores portátiles" de la Asociación Nacional de Protección contra Incendios (NFPA).

### Montaje de su extintor

Su extintor debe montarse de manera que sea fácil alcanzarlo y no debe estar oculto ni tener obstrucciones.

Fije el soporte que se proporciona con su extintor de manera segura en un montante de pared. Instale y fije el extintor de manera adecuada en el gancho.

### Instrucciones de uso:

Los elementos para cocinar súper calientes que contengan aceites y grasas animales o vegetales tienen la capacidad única de retener el calor y de volverse a encender después de extinguir la llama. La fórmula química seca contenida en este extintor tiene la capacidad no sólo de extinguir las llamas, sino también de mezclarse con el elemento de cocinar del combustible caliente y formar una capa para inhibir el potencial de que se vuelva a encender, cuando se aplica de manera apropiada.

- Hale y remueva la lengüeta de bloqueo.
- Comience a 5 pies del fuego de la cocina.
- Apunte el extintor al recipiente de cocina.
- Apriete y presione completamente la palanca de operación para iniciar la descarga del agente extintor (el tiempo total de descarga aproximado es de 8 a 12 segundos).
- Vacíe el contenido completo del extintor. Esparza sólo lo necesario para cubrir la parte interna del recipiente de cocinar.
- **INMEDIATAMENTE DESPUÉS DE DESCARGAR EL EXTINTOR, APAGUE EL ARTEFACTO PARA ELIMINAR LA FUENTE DE CALOR.**
- Una vez que el extintor está vacío, salga de la vivienda y asegúrese de haber llamado al departamento de bomberos.
- Nunca intente transportar, mover o alterar la capa del agente extintor hasta que se haya enfriado apropiadamente. Algunas veces, los elementos para cocinar pueden retener el calor suficiente para volverse a encender por hasta 15 minutos.

SERVICE/INSPECTION RECORD TAG  
(REQUIRED FOR UL LISTING)

MODEL NO.:

SERIAL NO.:

MFG. DATE:



REPLACE IMMEDIATELY AFTER USE

FOR PRODUCT INFORMATION  
CALL 1-800-880-6788

**IMPORTANT:** To insure fire extinguisher will be ready when needed follow inspection and maintenance instructions in manual and familiarize yourself with operating instructions on the nameplate.

Protect tag and extinguisher if exposed to weather.

**DO NOT REMOVE OR ALTER THIS TAG  
TEAR ALONG PERFORATIONS AND REMOVE**

