Installation Instructions

DAR Device Appliance Relocator PID# SSU00595




0 12" Center to Center 0 0 17" O 1 5/8" Filler plate optional with device mounting

Installation and wiring should be performed by qualified personnel only - Equipment damage and/or malfunction may result from improper installation. Remove all power from the system until the installation is complete and ready for testing. All work of any kind shall be performed to meet the requirements of any and all local, state and federal codes and/or standards set by the authority having jurisdiction. This package includes the relocator & all required hardware. Pull station & gang box supplied by others.

Installation Procedure

- Remove existing pull station.
- Secure Base to gang box using 6-32 x 3/8" screws and # 8 wood screws with plastic wall anchors as shown.
- Connect building wiring to terminal strip.
- Secure cover onto base using the
 (4) 6-32 x 1/4" screws. (supplied)
- Use adapter plate if needed to cover up 4" square opening.
- Connect pull station to building wiring. (see schematic for details)

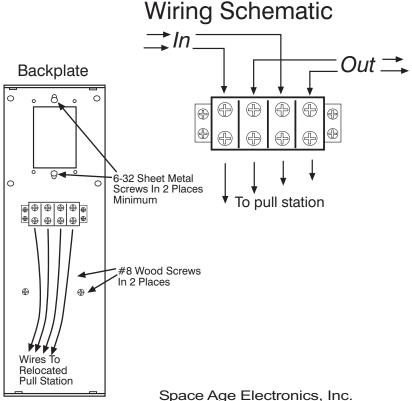

©Space Age Electronics, Inc. 1999 EC0238 LT10276 Rev. B www.1sae.com 508.485.0966—voice 508.485.4740—fax