

INSTALLATION AND SETUP GUIDE

<i>Keypad Features</i>	ADEMCO 6150 Fixed-Word	ADEMCO 6160 2-Line Alpha
Backlit Display	YES (see note)	YES (see note)
Dedicated Function Keys	YES	YES
Built-in Sounder	Piezo	Speaker

Note: Permanent display backlighting is an option on some controls (see the control's instructions for details).

GENERAL INFORMATION

The ADEMCO 6150 and ADEMCO 6160 are addressable Remote Keypads designed for use with ADEMCO control panels. Addresses are set via the keypad keys.

The keys on the keypads are continuously backlit for convenience.

KEYPAD DISPLAYS AND LEDS

The keypads have the following display features:

Model	Fixed Word Display	2-line Alpha Display	2-digit Zone Identifier	Custom Zone Descriptors
6150	X		X	
6160		X		X

The following table shows the LEDs and their functions:

LED	Function
Red	Lights when the system is armed in any mode
Green	Lights when the system is "ready" to be armed.

SPECIAL FUNCTION KEYS

The keypads also feature function keys. These keys may be programmed for panic alarms or other special functions such as macros. See the control's instructions for details.



Function keys must be held down for at least 2 seconds to activate an alarm, key pairs activate immediately.

Function Keys

A or [1] and [*]

B or [*] and [#]

C or [3] and [#]

D

WIRING AND INSTALLATION

The keypads can be surface mounted directly to a drywall, or to a single- or double-gang electrical box.


- Remove the case back** by pushing down two "snaps." See diagram below.
- Route wiring from the control panel** through the opening in the case back.
- Mount the case back** to a wall or electrical box.
- Wire directly from the keypad's terminal block** to the terminal block on the control board as follows:

Wiring Table (All Keypads)

Keypad	Control Panel	Wire Color
G	Data In	Green
-	- Aux Pwr (GND)	Black
+	+ Aux. Pwr	Red
Y	Data Out	Yellow


See the control panel's Installation and Setup Guide for more complete details.

- Reattach the keypad** to its case back.

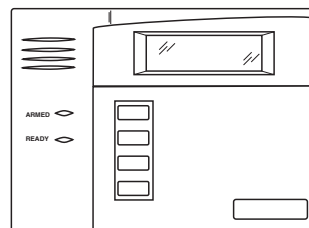

NOTE:
TO REMOVE CASE BACK
PUSH IN THE TWO MOUNTING
SNAPS LOCATED ALONG THE
BOTTOM OF THE KEYPAD
AND LIFT UP.

RETAINING
SNAPS

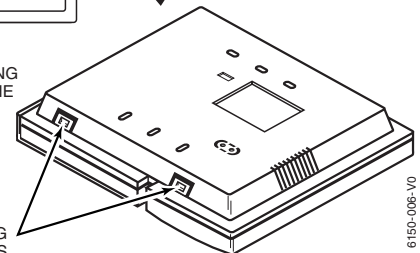

6150-006-V0

SETTING THE KEYPAD ADDRESS

The keypad can either be set for an address of 00-30, or to the non-addressable mode (31). The keypad's default address is 31.

To change the keypad's address, do the following:

1. Enter address mode: Power up the keypad. Within 60 seconds of power-up, press and hold down the [1] and [3] keys at the same time for 3 seconds. (If unable to enter address mode, power up and try again.)

The current keypad address will be displayed, and the cursor will be under the "tens" digit. If 10 seconds have passed with no key entry, the keypad automatically exits address mode. You must power down, power up and start address mode again.

NOTE: The keypad will not enter address mode if the panel to which it is connected is in programming mode.

2. Set the current address to "00": Press [0] to clear the current "tens" digit. The cursor will move to the "ones" digit position. Press [0] to clear the current "ones" digit. The cursor will move back to the "tens" digit position.
3. Enter the keypad's address: Enter the proper "tens" digit of the keypad's address. The cursor will move to the "ones" digit position. Enter the proper "ones" digit of the keypad's address. Note that address "31" sets the keypad to non-addressable mode.
4. Exit address mode:
Press [*] to save the displayed address and exit address mode.

VIEWING THE KEYPAD ADDRESS

Press and hold down the [1] and [3] keys at the same time for about 3 seconds. The current address is displayed. No key entry is allowed. Press any key to exit or wait 10 seconds to exit viewing mode.

FUNCTION KEY LABELS

A set of adhesive-backed labels with some typical function symbols (i.e., fire, police, personal emergency, etc.) is provided. These labels can be placed on or next to the keys to identify each key's function for the end user (as determined by the control panel's capability and programming; see the control's instructions).

SPECIFICATIONS

Physical:

6150: 4-7/8"H x 6-1/4"W x 1"D
6160: 5-5/16"H x 7-3/8"W x 1-3/16"D

Displays:

6150: Fixed-Word LCD (backlit).
6160: 2 x 16 alpha-numeric supertwist LCD, backlit.

Sounder:

6150: Piezo-electric (fire alarm is loud, pulsing single tone; (all Keypads) burglary alarm is loud, continuous, dual tone).
6160: Speaker.

Voltage:

12VDC

Current:

6150: 70mA (ARMED LED lit, LCD backlight and sounder on), reduces to 40mA when panel is operating in standby mode (backlight off).
6160: 150mA (ARMED LED lit, LCD backlight and sounder on), reduces to 40mA when panel is operating in standby mode (backlight off).

REFER TO INSTALLATION INSTRUCTIONS FOR THE CONTROL PANEL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION AND LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

www.honeywell.com/security



K3590-ADV2 4/04 Rev. A